


# Magic Chef YG208KA 01 - CONTROL PANEL

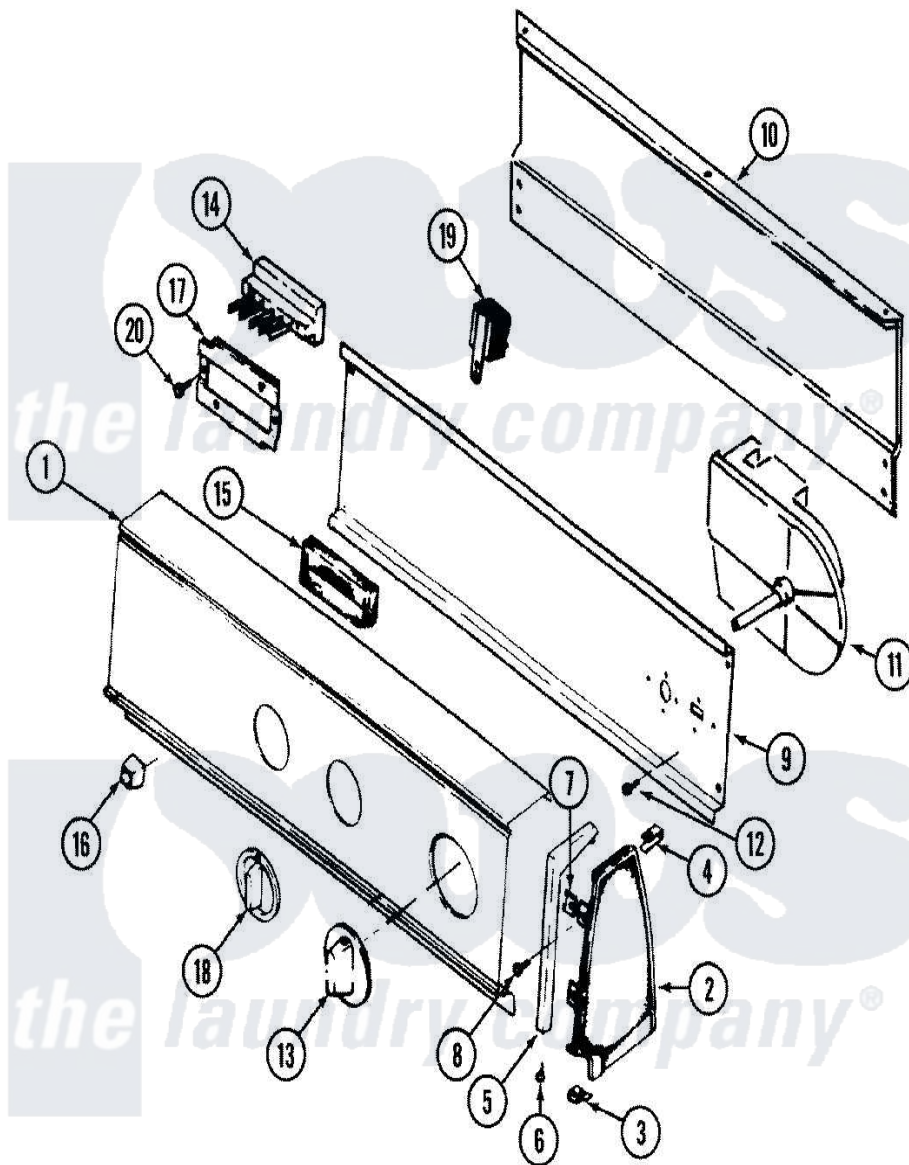

Magic Chef [Residential Magic Chef YG208KA Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2474		Not Available	PANEL, CONTROL
2	35-2488	<a href="#">21001452</a>		Cap- End
"	25-7496	<a href="#">25-7760</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2487	<a href="#">21001451</a>		Cap- End
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	W10124350		Not Available	NOT REQUIRED PART OR SEE NOTE
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
5	<a href="#">53-2413</a>			End Trim L.H.
"	<a href="#">53-2412</a>			End Trim RH
6	<a href="#">25-7760</a>			Screw
7	25-7435	<a href="#">33002917</a>		Screw, No.10-16
8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-1678		Not Available	CONTROL SHIELD
10	35-2688	<a href="#">21001460</a>		Shield, Rear
"	<a href="#">25-3457</a>			Screw, Sems
11	53-1816		Not Available	TIMER
12	25-7435	<a href="#">33002917</a>		Screw, No.10-16
13	53-2501	<a href="#">31001219</a>		Knob Ski
14	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-2416</a>			Switch, 5 Pushbutton
15	35-3394		Not Available	PAD, SWITCH
16	35-3162		Not Available	PUSHBUTTON
17	33-6621		Not Available	BRACKET, SWITCH
18	35-3960	<a href="#">21001283</a>		Knob, Selector---Piq
19	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1666</a>			Buzzer - Adjustable
20	25-7712		Not Available	SCREW
21	31001050		Not Available	MANUAL, USE & CARE
22	53-2489		Not Available	MANUAL, USE & CARE
23	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF

