


# Magic Chef YG208KV 01 - CABINET (YG208KV)

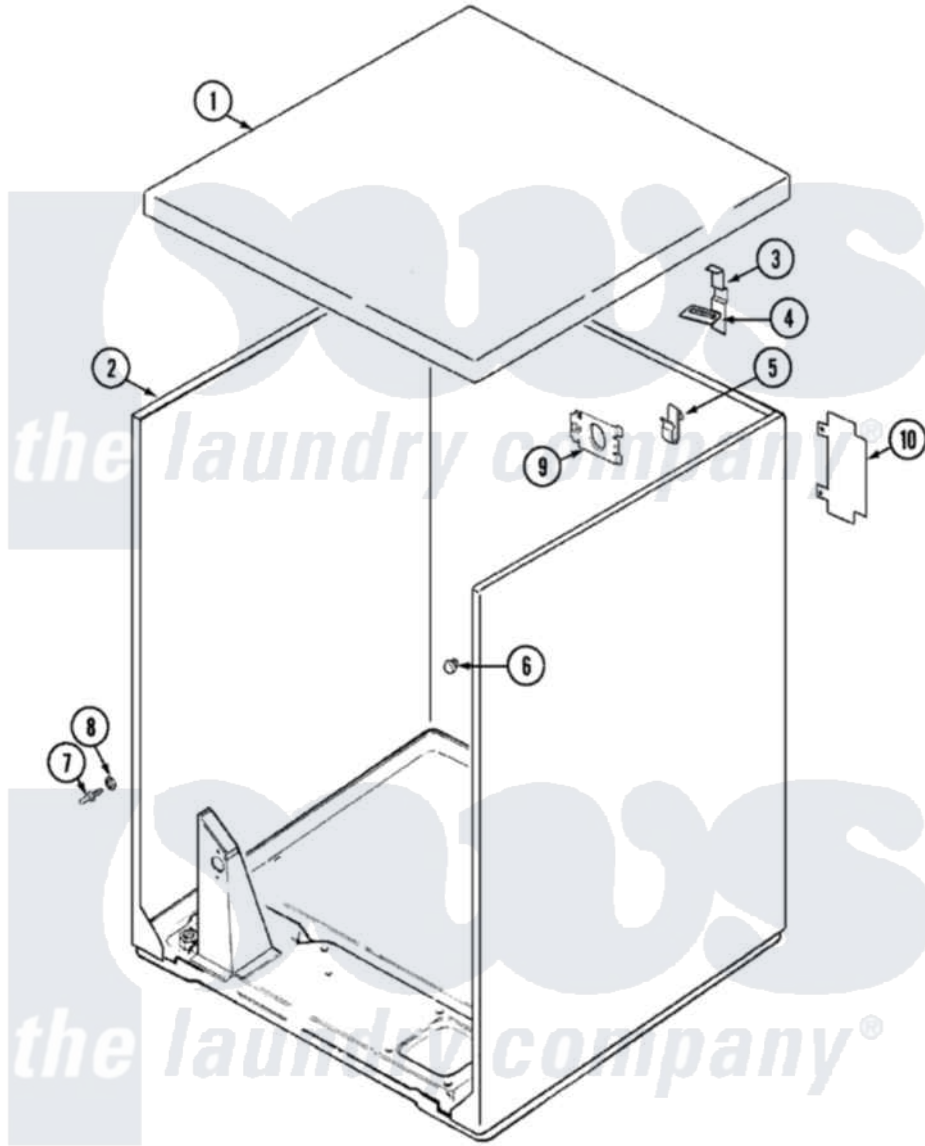

Magic Chef [Residential Magic Chef YG208KV Dryer Parts](#) Parts Diagram 01 - CABINET (YG208KV)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2435		Not Available	TOP, CABINET
2	53-2147	<a href="#">31001714</a>		Cabinet And Base Assembly
3	<a href="#">63-5712</a>			Hinge, Cabinet Top
4	<a href="#">33-0930</a>			Pad, Top Hinge
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	<a href="#">25-3034</a>			Clip, Wiring
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	<a href="#">53-0643</a>			Pin, Locator
8	<a href="#">53-0200</a>			Sleeve, Locator Pin
"	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
9	53-0135		Not Available	SUPPORT, POWER CORD
10	<a href="#">53-0136</a>			Cover, Supply Cord
"	25-7857	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping