


Magic Chef YG209KY 02 - CONTROL PANEL

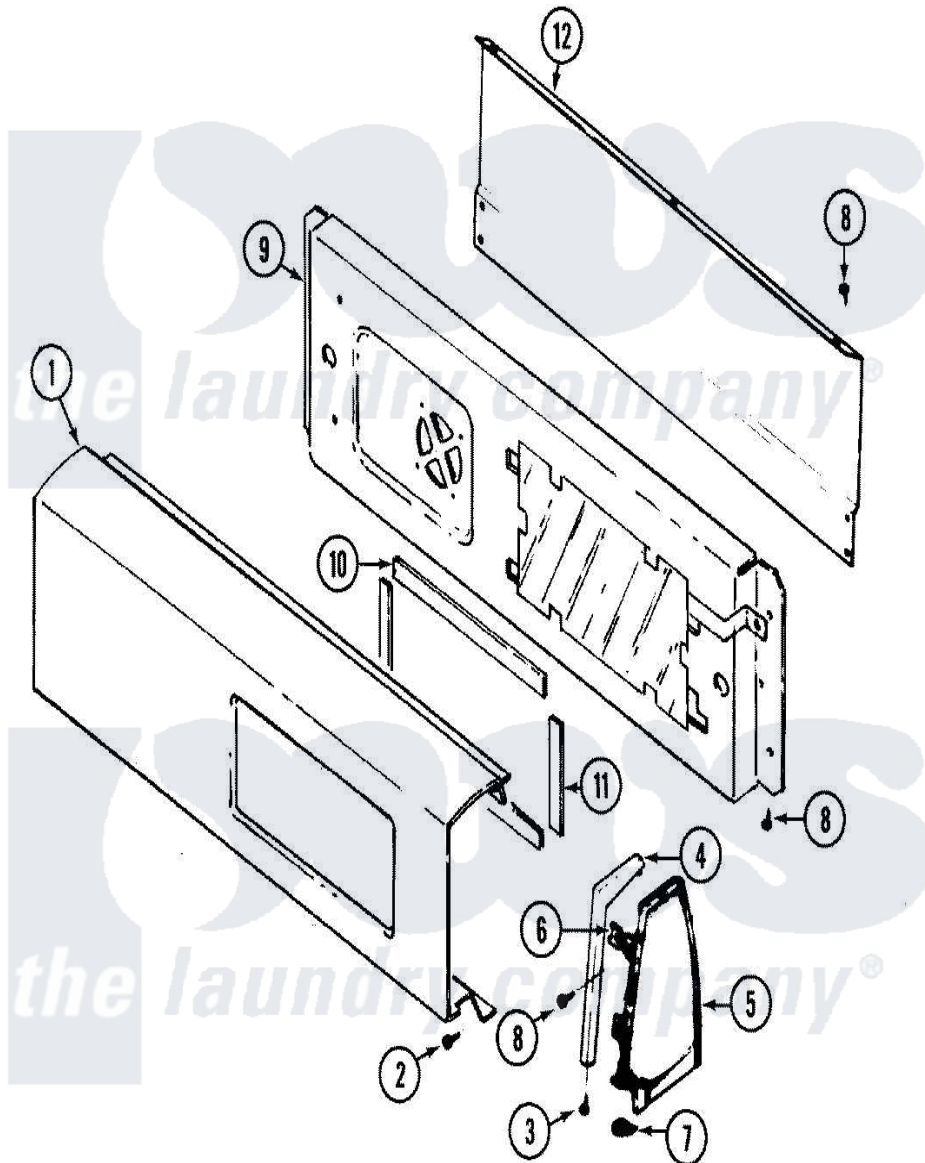

Magic Chef [Residential Magic Chef YG209KY Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	35-3852		Not Available	CONTROL PANEL
2	25-7793			Screw
3	25-7760			Screw
4	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	35-2488	21001452		Cap- End
"	35-2487	21001451		Cap- End
6	25-7702			Speedclip, End Cap To Control Panel
7	25-7851			Speedclip, End Cap To Top
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-2238			Control Shield And Electronic As
"	35-3540			Speaker Assembly
10	35-3450			Seal, Panel Long
11	35-3453			Seal, Panel Short

12	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	53-2405	Not Available	MANUAL, USE & CARE
"	25-3457		Screw, Sems
"	53-1040	Not Available	MANUAL, USE & CARE
"	35-2688	21001460	Shield, Rear

