


Magic Chef YG20EN2 01 - CONTROL PANEL

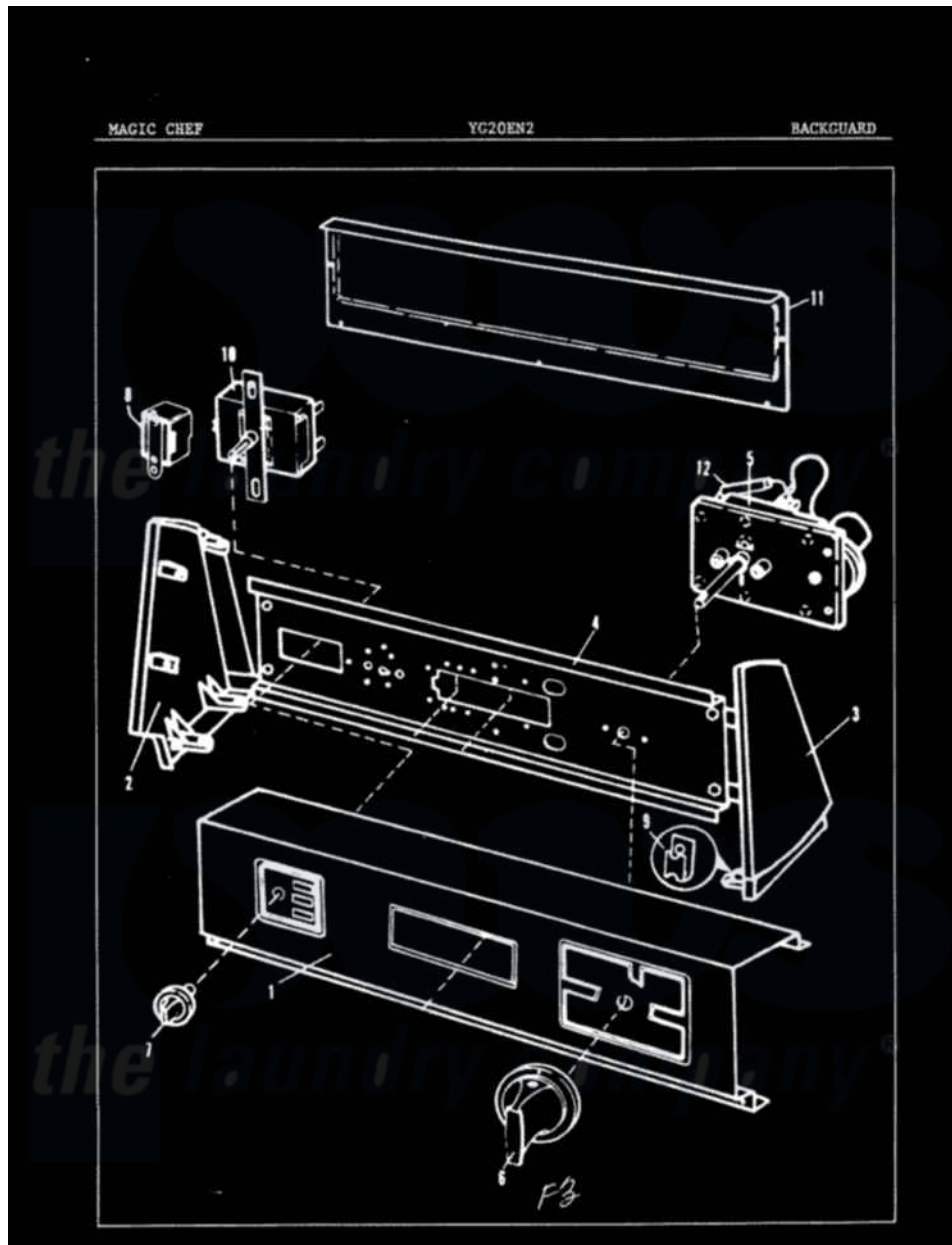

Magic Chef [Residential Magic Chef YG20EN2 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	25-7649	910187		Screw
"	53-0830		Not Available	CONTROL PANEL
"	25-7702			Speedclip, End Cap To Control Panel
2	53-0265			LH Endcap
3	25-7760			Screw
"	53-0264			RH Endcap
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
4	53-0365	53-1676		Shield, Control
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7702			Speedclip, End Cap To Control Panel
5	25-0289		Not Available	SCREW
"	53-0657			Timer
"	53-0497	LA-1026		Timer Kit

"	63-6752		Not Available	TIMER MOTOR
6	53-0653	31001219		Knob Ski
"	25-6044			Set Screw
"	53-0495		Not Available	TIMER KNOB
7	35-0280		Not Available	SELECTOR KNOB
8	63-6731	53-1639		Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	25-7702			Speedclip, End Cap To Control Panel
10	53-0344		Not Available	SWITCH, TEMPERATURE
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-3457			Screw, Sems
"	25-7435	33002917		Screw, No.10-16
"	25-7697	25-2219		Screw
"	25-7852			Speedclip, Rr Shld To End Cap
"	53-0268	21001460		Shield, Rear
"	25-7851			Speedclip, End Cap To Top

