


# Magic Chef YG20FA5 01 - CONTROL PANEL

MAGIC CHEF

YG20FN-5

BACKGUARD

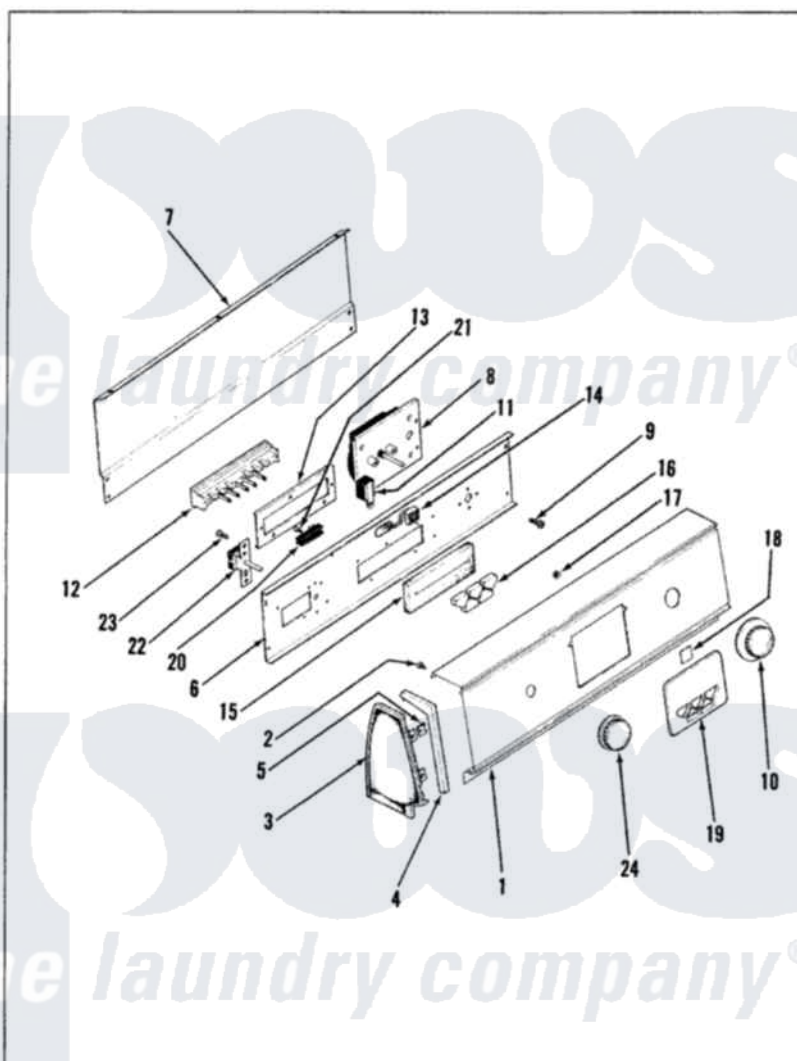

Issued 11/87

Magic Chef [Residential Magic Chef YG20FA5 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0855		Not Available	CONTROL PANEL
2	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
"	<a href="#">25-3457</a>			Screw, Sems
"	25-7435	<a href="#">33002917</a>		Screw, No.10-16
3	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">53-0265</a>			LH Endcap
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7649	<a href="#">910187</a>		Screw
4	53-0278		Not Available	TRIM, END CAP (LT)
"	<a href="#">25-7760</a>			Screw
"	53-0277		Not Available	TRIM, END CAP (RT)
5	<a href="#">25-7702</a>			Speedclip, End Cap To Control

	<a href="#">25-7702</a>		Panel
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
6	<a href="#">25-7760</a>		Screw
7	<a href="#">25-3457</a>		Screw, Sems
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0268	<a href="#">21001460</a>	Shield, Rear
8	53-0660	<a href="#">LA-1027</a>	Timer Kit
9	25-0205	<a href="#">216412</a>	Screw, Bracket To Timer
10	53-0850	Not Available	TIMER KNOB ASM
11	63-5685	<a href="#">63-5613</a>	Timer
"	63-6731	<a href="#">53-1639</a>	Buzzer Assembly
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
12	53-0856	Not Available	PB SWITCH
13	33-6620	Not Available	BRACKET
"	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
14	35-0691-01	Not Available	SIGNAL LIGHT
"	35-0691-02	Not Available	SIGNAL LIGHT
"	35-0691-03	Not Available	SIGNAL LIGHT
15	33-8541	Not Available	SWITCH PAD
16	53-0853-01	Not Available	PUSHBUTTON
"	53-0853-02	Not Available	PUSHBUTTON
"	53-0853-03	Not Available	PUSHBUTTON
"	53-0853-04	Not Available	PUSHBUTTON
17	25-7882	Not Available	PALNUT
18	35-0690	Not Available	LENS
19	53-0857	Not Available	LENS
"	53-0854	Not Available	PB BEZEL
20	35-0729	<a href="#">7401P037-60</a>	Block, Terminal
21	25-7649	<a href="#">910187</a>	Screw
22	53-0346	<a href="#">53-1263</a>	Rotary Switch
23	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
24	53-0849	Not Available	SELECTOR KNOB - FAB

