


Magic Chef YG20FY1 01 - CONTROL PANEL

MAGIC CHEF

YG20FN-1

BACKGUARD

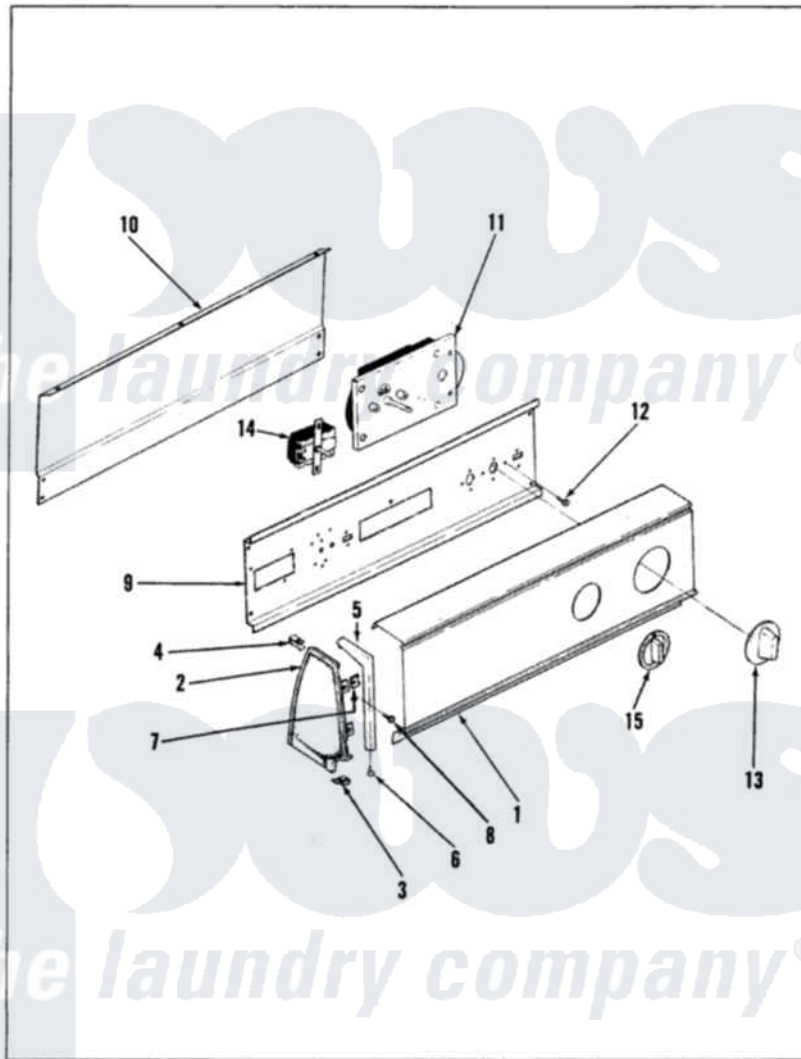

Issued 11/87

Magic Chef [Residential Magic Chef YG20FY1 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0991		Not Available	CONTROL PANEL
2	53-0264			RH Endcap
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0265			LH Endcap
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0365	53-1676	Shield, Control
10	53-0268	21001460	Shield, Rear
11	53-0635		Not Available
"	53-0662		TIMER MOTOR
12	25-0205	216412	Timer
13	53-0653	31001219	Screw, Bracket To Timer
14	53-0456		Knob Ski
"	25-3092	90767	Switch, Selector
15	35-0168		Screw, 8A X 3/8 HeX Washer Head Tapping
			Not Available
			SELECTOR KNOB

