


Magic Chef YG20FY2 01 - CONTROL PANEL

MAGIC CHEF YG20FN-2 BACKGUARD

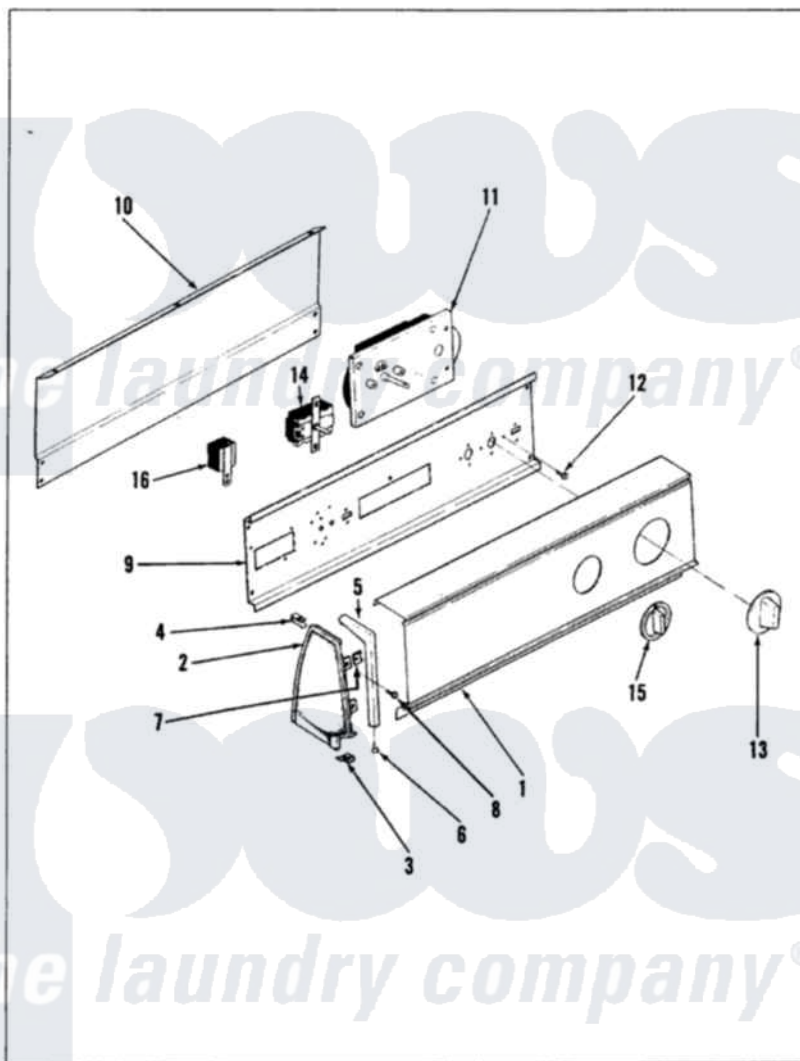

Issued 11/87

Magic Chef [Residential Magic Chef YG20FY2 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0992		Not Available	CONTROL PANEL
2	53-0264			RH Endcap
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	53-0265			LH Endcap
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0365	53-1676	Shield, Control
10	53-0268	21001460	Shield, Rear
11	63-6752		Not Available TIMER MOTOR
"	53-0657		Timer
12	25-0205	216412	Screw, Bracket To Timer
13	53-0653	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0394	53-1264	Rotary Switch
15	35-0168		Not Available SELECTOR KNOB
16	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

the laundry company[®]

the laundry company[®]

the laundry company[®]