


Magic Chef YG20HA2 02 - CONTROL PANEL (YG20H2)(REV. E)

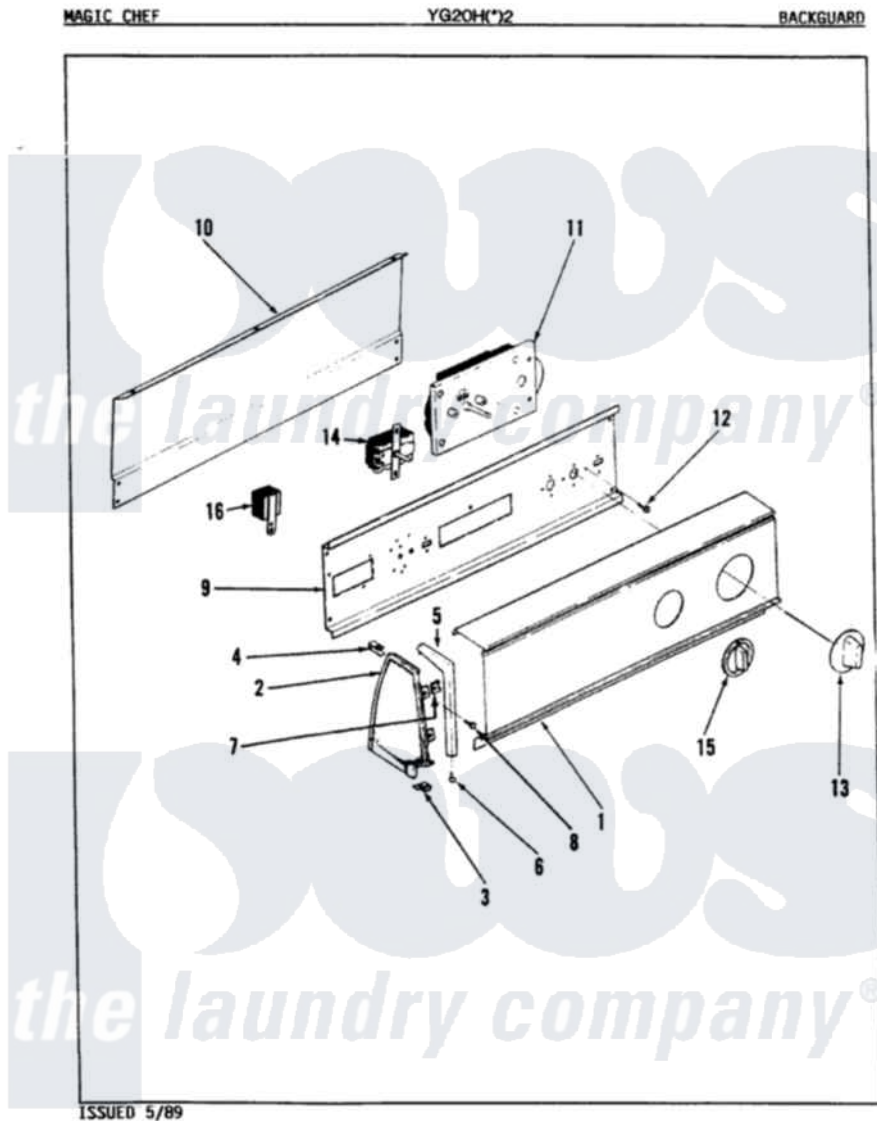

ISSUED 5/89

Magic Chef [Residential Magic Chef YG20HA2 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (YG20H2)(REV. E)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1277		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	53-2488	31001109		Owners Man
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676			Shield, Control

10	35-2688	21001460		Shield, Rear
11	53-0635		Not Available	TIMER MOTOR
"	53-1547			Timer
12	25-0205	216412		Screw, Bracket To Timer
13	53-1291	31001219		Knob Ski
14	53-0456			Switch, Selector
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2185	21001283		Knob, Selector---Piq
16	63-6731	53-1639		Buzzer Assembly
"	53-1040		Not Available	MANUAL, USE & CARE
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

the laundry company[®]

the laundry company[®]

the laundry company[®]