


Magic Chef YG20HA3C 01 - CONTROL PANEL (REV. A-B)

MAGIC CHEF YG20HN-3C BACKGUARD

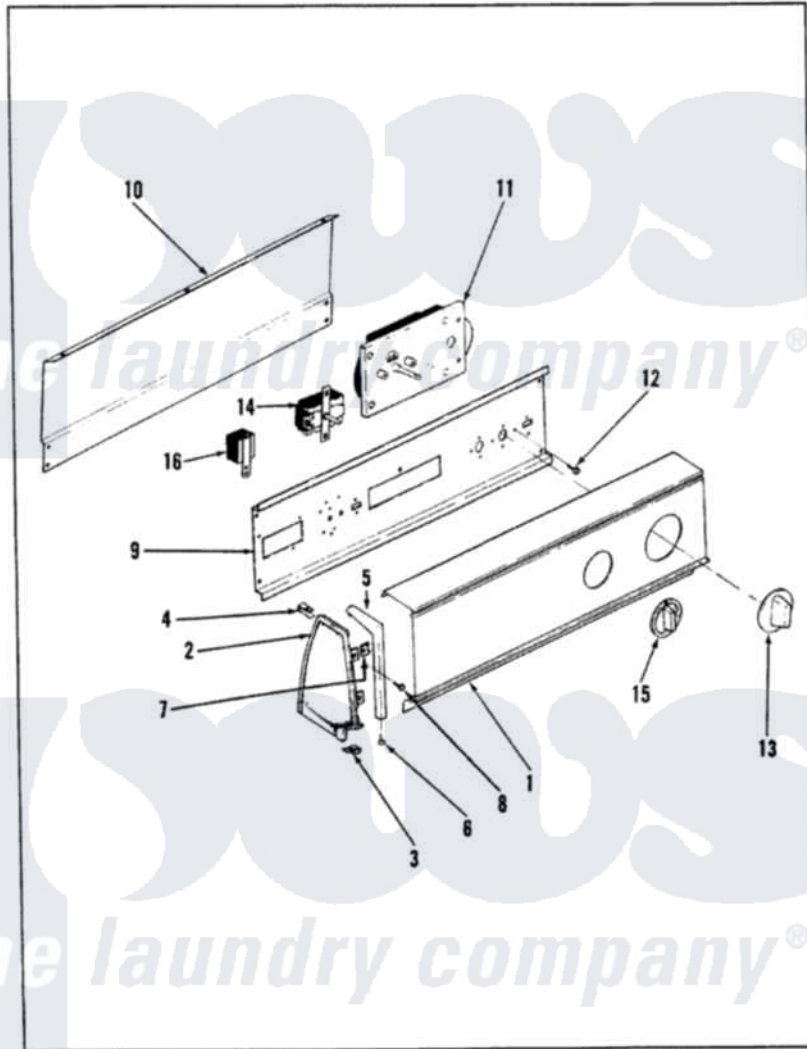

ISSUED 4/90

Magic Chef [Residential Magic Chef YG20HA3C Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-B)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	35-2487	21001451		Cap- End
"	53-2488	31001109		Owners Man
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
11	53-1303		Not Available
"	63-6752		Not Available
12	25-0205	216412	Screw, Bracket To Timer
13	53-1529	31001219	Knob Ski
14	53-1265		Not Available
"	25-3092	90767	ROTARY SWITCH
			Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2185	21001283	Knob, Selector---Piq
16	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
17	53-1456		Not Available
			MANUAL, USE & CARE

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]