


Magic Chef YG20HN4 01 - CONTROL PANEL

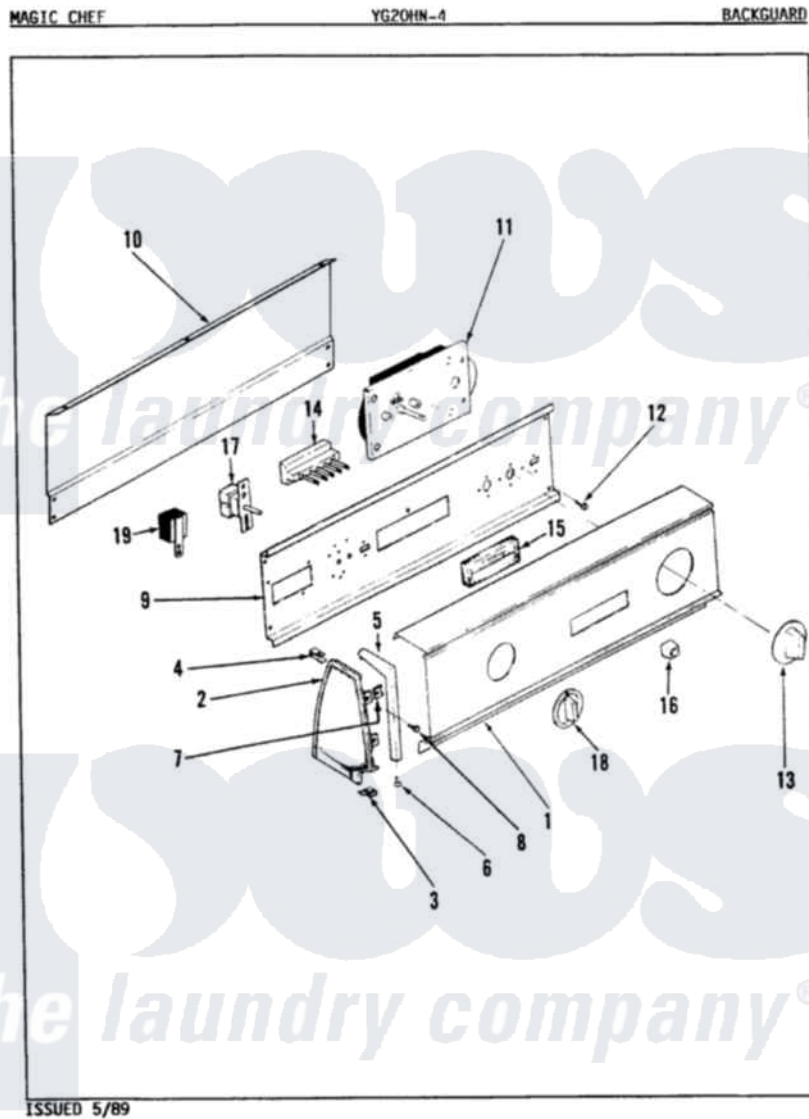

Magic Chef [Residential Magic Chef YG20HN4 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1275	53-1821		Control Panel
2	53-0265			LH Endcap
"	25-7649	910187		Screw
"	53-0264			RH Endcap
"	25-7702			Speedclip, End Cap To Control Panel
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	25-7760			Screw
7	25-7435	33002917		Screw, No.10-16
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping

9	53-0323	Not Available	CONTROL SHIELD
10	25-3457		Screw, Sems
"	25-3457		Screw, Sems
"	53-0268	21001460	Shield, Rear
11	53-1300	Not Available	TIMER
"	63-5685	63-5613	Timer
12	25-0205	216412	Screw, Bracket To Timer
13	53-1529	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7712	Not Available	SCREW
"	33-6621	Not Available	BRACKET, SWITCH
"	53-1296		Switch
15	33-8541	Not Available	SWITCH PAD
16	35-0385		Pushbutton
17	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1263		Rotary Switch
18	35-2185	21001283	Knob, Selector---Piq
19	63-6731	53-1639	Buzzer Assembly
"	53-1040	Not Available	MANUAL, USE & CARE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

