


Magic Chef YG20HV3 02 - CONTROL PANEL (YG20HV3)

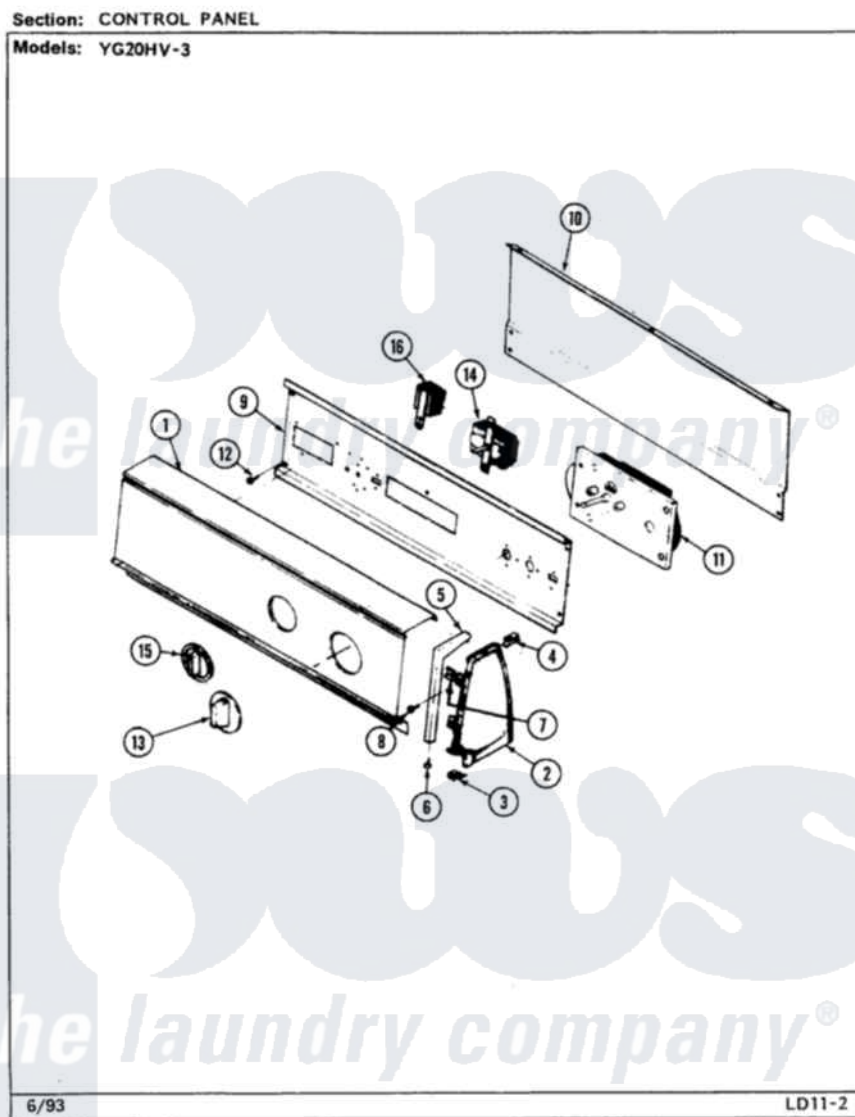

Magic Chef [Residential Magic Chef YG20HV3 Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL (YG20HV3)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-2383		Not Available	CONTROL PANEL
2	35-2668	21001453		Cap- End
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7851			Speedclip, End Cap To Top
"	35-2669		Not Available	CAP, END (LT)(WHT)
3	25-7697	25-2219		Screw
"	25-7851			Speedclip, End Cap To Top
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7702			Speedclip, End Cap To Control

7	25-1192			Panel
8	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676			Shield, Control
10	35-2688	21001460		Shield, Rear
11	53-1758			Timer
12	25-0205	216412		Screw, Bracket To Timer
13	53-1671	53-2129		Knob, And Skirt Assembly
14	53-0344		Not Available	SWITCH, TEMPERATURE
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
15	35-2673	21001239		Knob, Selector
16	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-2384		Not Available	MANUAL, USE & CARE
"	53-1639			Buzzer Assembly
17	53-1040		Not Available	MANUAL, USE & CARE
"	16000326			Guide, Quick Ref - Jenn-Air

