


Magic Chef YG20HY3 01 - CONTROL PANEL

MAGIC CHEF

YG20HN-3

BACKGUARD

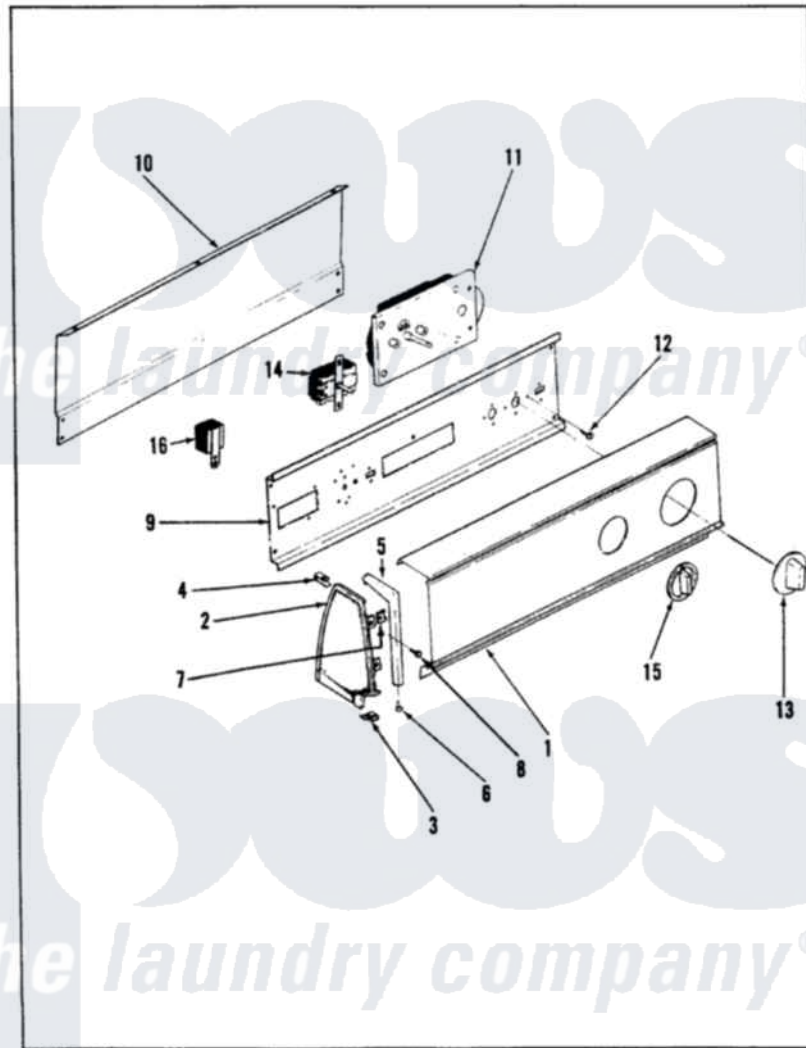

ISSUED 5/89

Magic Chef [Residential Magic Chef YG20HY3 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1276		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)

6	25-7760		Screw
7	25-7702		Speedclip, End Cap To Control Panel
8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1676		Shield, Control
"	53-0365	53-1676	Shield, Control
10	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
11	63-6752	Not Available	TIMER MOTOR
"	53-1303	Not Available	TIMER
12	25-0205	216412	Screw, Bracket To Timer
13	53-1529	31001219	Knob Ski
14	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-0344	Not Available	SWITCH, TEMPERATURE
15	35-2185	21001283	Knob, Selector---Piq
16	63-6731	53-1639	Buzzer Assembly
"	53-1040	Not Available	MANUAL, USE & CARE
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping

