


# Magic Chef YG20JA1C 01 - CABINET (REV. A)

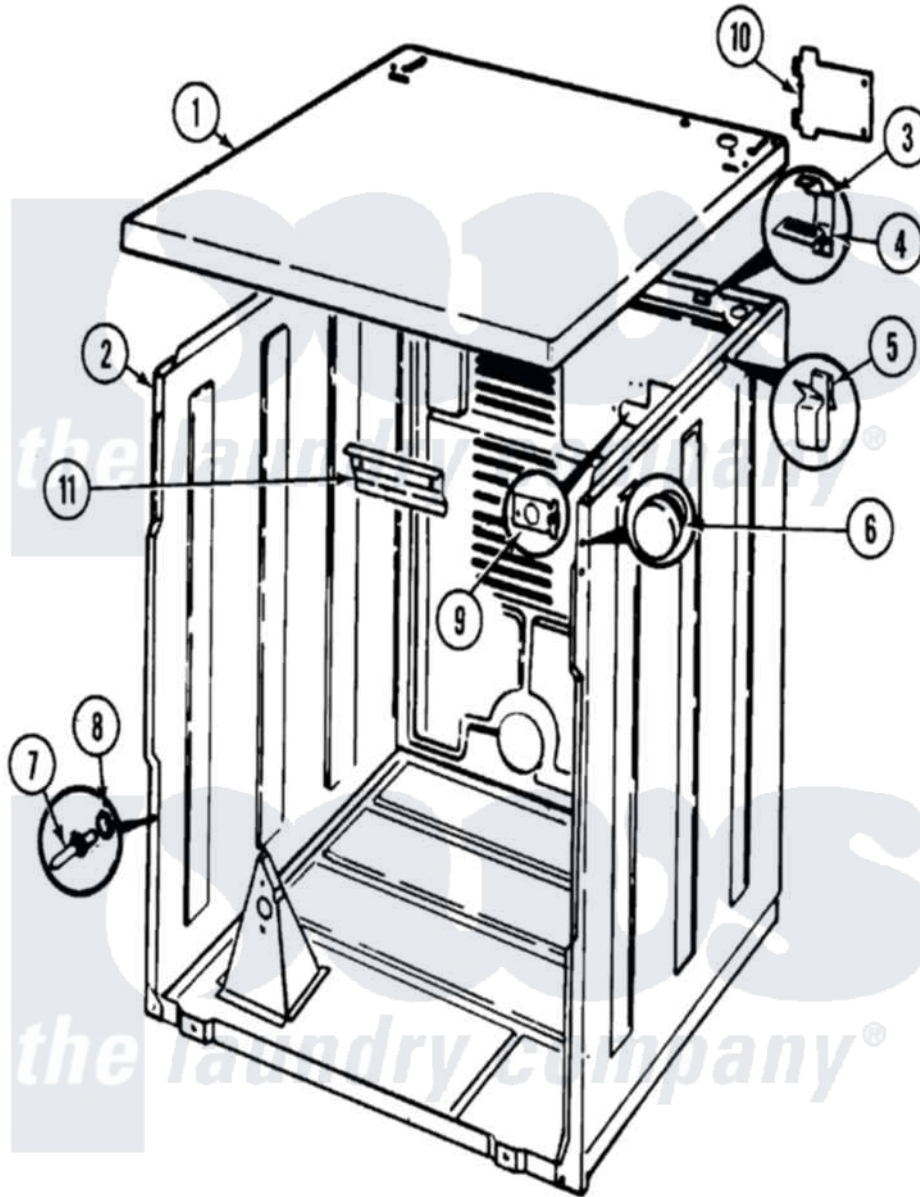

Magic Chef [Residential Magic Chef YG20JA1C Dryer Parts](#) Parts Diagram 01 - CABINET (REV. A)  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1711-24	<a href="#">53-2435-24</a>		Top, Cabinet
2	53-1644-24	<a href="#">31001715</a>		Cabinet And Base Assembly
3	<a href="#">63-5712</a>			Hinge, Cabinet Top
4	<a href="#">33-0930</a>			Pad, Top Hinge
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
5	<a href="#">25-3034</a>			Clip, Wiring
6	<a href="#">33-2653</a>			Bumper, Cabinet
7	63-6148	<a href="#">53-0643</a>		Pin, Locator
8	<a href="#">53-0200</a>			Sleeve, Locator Pin
"	25-0224	<a href="#">3400029</a>		Nut, Adapter Plate
9	53-0135		Not Available	SUPPORT, POWER CORD
10	<a href="#">53-0284</a>			Cover, Terminal
"	25-7857	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
11	<a href="#">53-0133</a>			Shield, Heat
"	<a href="#">25-3457</a>			Screw, Sems