


Magic Chef YG20JA25 01 - CONTROL PANEL (REV. A-C)

SECTION: BACKGUARD

MODEL: YG20JA25

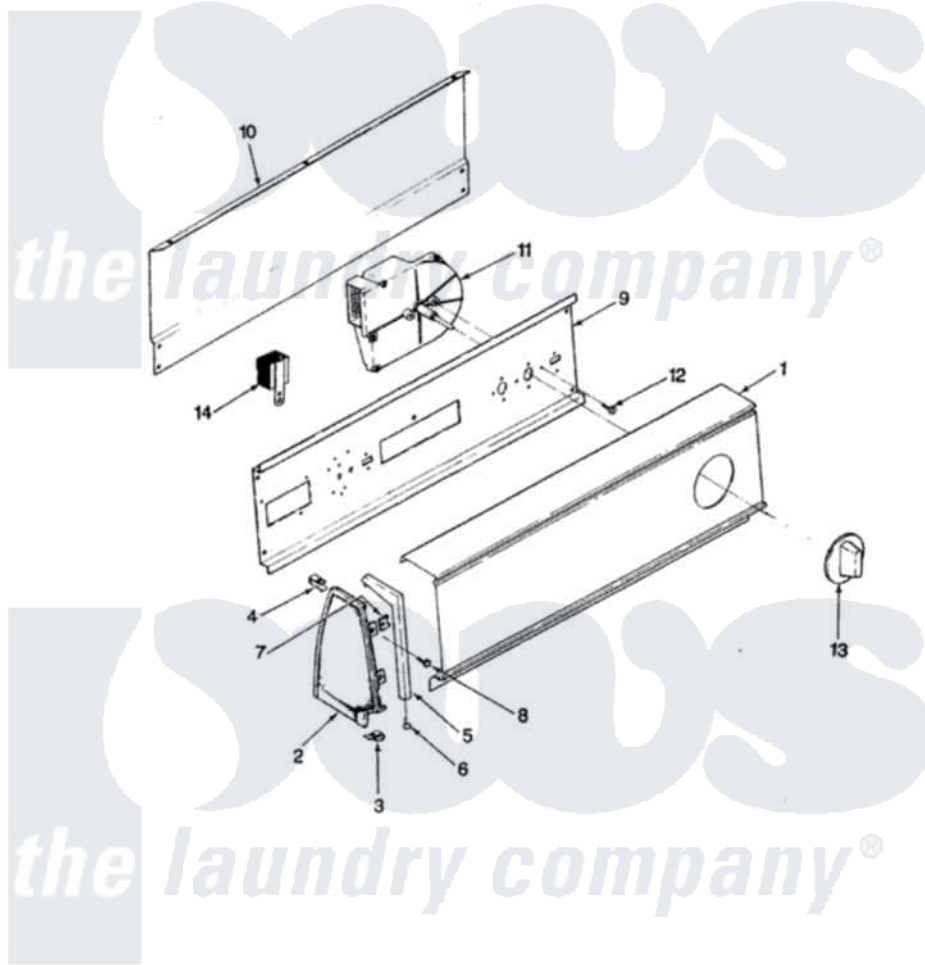

Issue Date: 5/90

Magic Chef [Residential Magic Chef YG20JA25 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-C)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1603		Not Available	CONTROL PANEL
2	35-2488	21001452		Cap- End
"	25-7649	910187		Screw
"	25-7702			Speedclip, End Cap To Control Panel
"	35-2487	21001451		Cap- End
"	53-0264			RH Endcap
"	53-0265			LH Endcap
3	25-7851			Speedclip, End Cap To Top
"	25-7697	25-2219		Screw
4	25-7435	33002917		Screw, No.10-16
"	25-7852			Speedclip, Rr Shld To End Cap
5	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
6	25-7760			Screw
7	25-7435	33002917		Screw, No.10-16

8	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-0365	53-1676	Shield, Control
"	53-1676		Shield, Control
10	35-2688	21001460	Shield, Rear
"	53-0268	21001460	Shield, Rear
"	25-3457		Screw, Sems
11	53-0656	Not Available	TIMER
"	53-0601		Timer Motor
12	25-0205	216412	Screw, Bracket To Timer
13	53-1533	31001219	Knob Ski
14	63-6731	53-1639	Buzzer Assembly
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	53-1607-1	Not Available	MANUAL, USE & CARE
15	16000326		Guide, Quick Ref - Jenn-Air

