


# Magic Chef YG20JA4 01 - CONTROL PANEL (REV. A-D)

SECTION: BACKGUARD

MODEL: YG20JA4

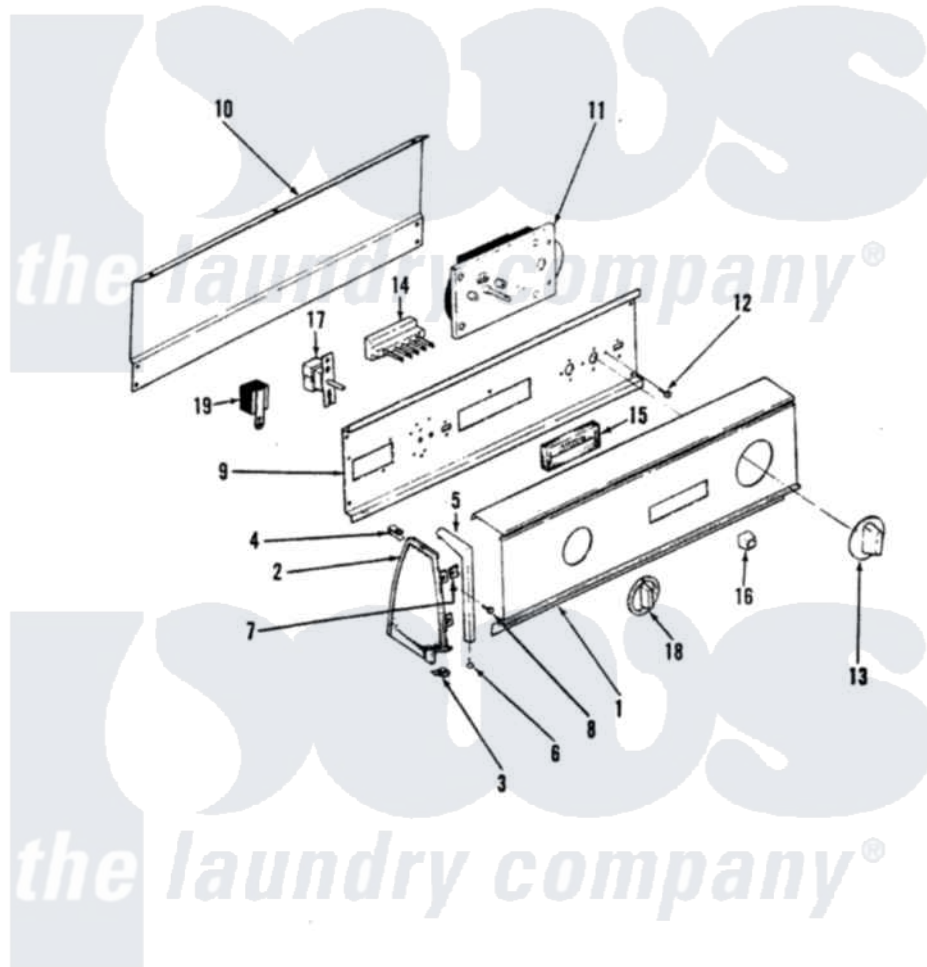

Issue Date: 4/90

Magic Chef [Residential Magic Chef YG20JA4 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-D)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1275	<a href="#">53-1821</a>		Control Panel
2	35-2488	<a href="#">21001452</a>		Cap- End
"	25-7649	<a href="#">910187</a>		Screw
"	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel
"	35-2487	<a href="#">21001451</a>		Cap- End
"	<a href="#">53-0264</a>			RH Endcap
"	<a href="#">53-0265</a>			LH Endcap
3	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	25-7697	<a href="#">25-2219</a>		Screw
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
6	<a href="#">25-7760</a>			Screw
7	25-7435	<a href="#">33002917</a>		Screw, No.10-16

8	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
9	53-1678		Not Available	CONTROL SHIELD
"	53-0323		Not Available	CONTROL SHIELD
10	<a href="#">25-3457</a>			Screw, Sems
"	<a href="#">25-3457</a>			Screw, Sems
"	35-2688	<a href="#">21001460</a>		Shield, Rear
"	53-0268	<a href="#">21001460</a>		Shield, Rear
11	53-1816		Not Available	TIMER
"	53-1300		Not Available	TIMER
"	63-5685	<a href="#">63-5613</a>		Timer
12	25-0205	<a href="#">216412</a>		Screw, Bracket To Timer
13	53-1529	<a href="#">31001219</a>		Knob Ski
14	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	33-6621		Not Available	BRACKET, SWITCH
"	25-7712		Not Available	SCREW
"	<a href="#">53-1296</a>			Switch
15	33-8541		Not Available	SWITCH PAD
16	35-2588		Not Available	PUSHBUTTON - BLACK
17	<a href="#">53-1263</a>			Rotary Switch
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
18	35-2185	<a href="#">21001283</a>		Knob, Selector---Piq
19	63-6731	<a href="#">53-1639</a>		Buzzer Assembly
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
20	53-1444		Not Available	MANUAL, USE & CARE

*the laundry company*<sup>®</sup>

*the laundry company*<sup>®</sup>