


Magic Chef YG20JA5 01 - CONTROL PANEL (REV. A-E)(YE20JA5)

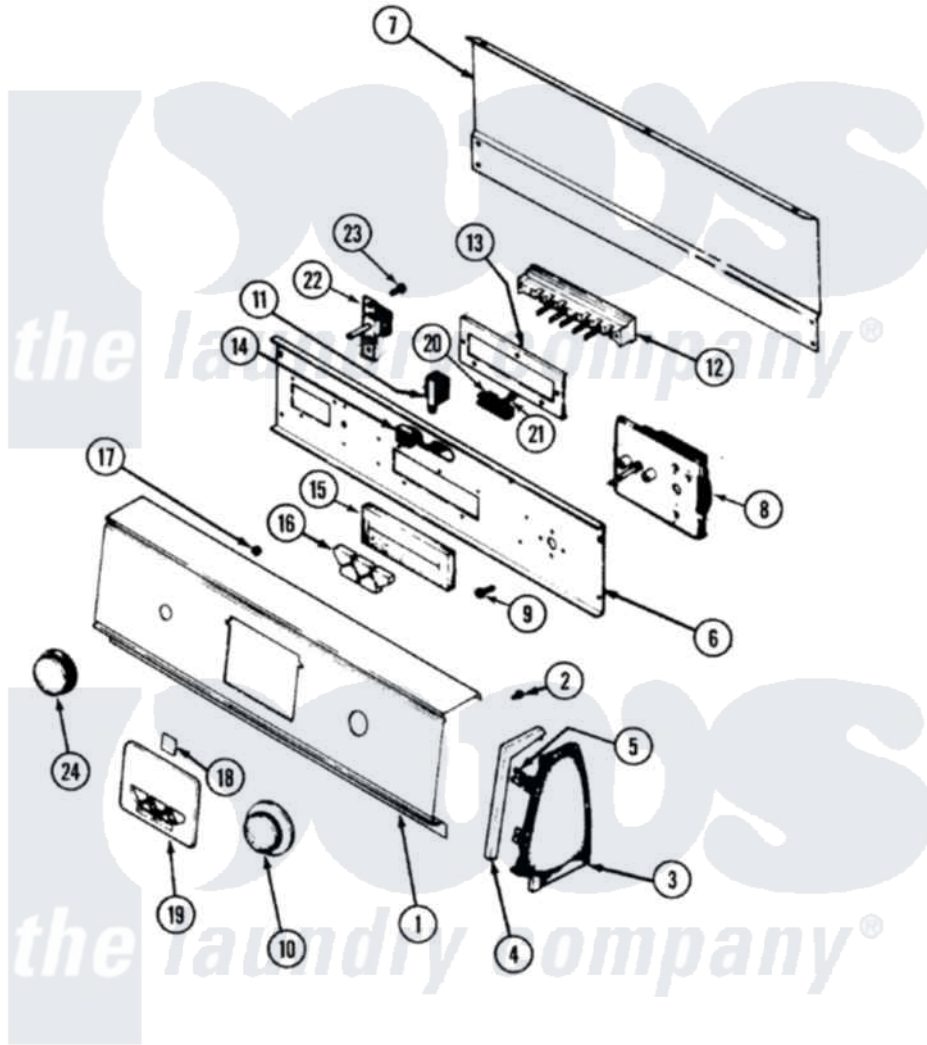

Magic Chef [Residential Magic Chef YG20JA5 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-E)(YE20JA5)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1654		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
"	25-3457			Screw, Sems
3	25-7649	910187		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7851			Speedclip, End Cap To Top
"	35-2487	21001451		Cap- End
"	35-2488	21001452		Cap- End
"	25-7697	25-2219		Screw
"	25-7702			Speedclip, End Cap To Control Panel
4	25-7760			Screw
"	53-0277		Not Available	TRIM, END CAP (RT)
"	53-0278		Not Available	TRIM, END CAP (LT)
5	25-3002	00767		Screw, 8A X 3/8 HeX Washer

			Head Tapping
"	25-7702		Speedclip, End Cap To Control Panel
6	35-2680	Not Available	CONTROL SHIELD
7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2668	21001453	Cap- End
"	25-3457		Screw, Sems
8	53-1300	Not Available	TIMER
"	53-1816	Not Available	TIMER
9	25-7435	33002917	Screw, No.10-16
"	25-0205	216412	Screw, Bracket To Timer
10	53-1529	31001219	Knob Ski
11	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	63-5685	63-5613	Timer
"	53-1666		Buzzer - Adjustable
12	53-1668	Not Available	SWITCH - 7 PUSHBUTTON
13	33-6620	Not Available	BRACKET
"	25-7712	Not Available	SCREW
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
14	35-0691-07	Not Available	LIGHT ASSY
"	35-0691-01	Not Available	SIGNAL LIGHT
"	35-0691-03	Not Available	SIGNAL LIGHT
"	35-0691-02	Not Available	SIGNAL LIGHT
15	33-8541	Not Available	SWITCH PAD
16	53-1271-02		Push Button
"	53-1271-06	Not Available	PUSHBUTTON (OFF)
"	53-1271-05	Not Available	PUSHBUTTON (ON)
"	53-1271-03		Push Button
"	53-1271-01		Push Button
"	53-1271-04		Push Button
17	25-7882	Not Available	PALNUT
18	35-0690	Not Available	LENS
19	53-1635	Not Available	BEZEL (BLACK) 7 POSITION
"	53-1665	Not Available	LENS DRYER
20	35-2257	7401P037-60	Block, Terminal
21	25-7649	910187	Screw
22	53-0346	53-1263	Rotary Switch
23	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	53-1675	Not Available	MANUAL, USE & CARE
"	53-1680	Not Available	KNOB, SELECTOR