


Magic Chef YG20JN5 01 - CONTROL PANEL (REV. A-D)(YG20JN5)

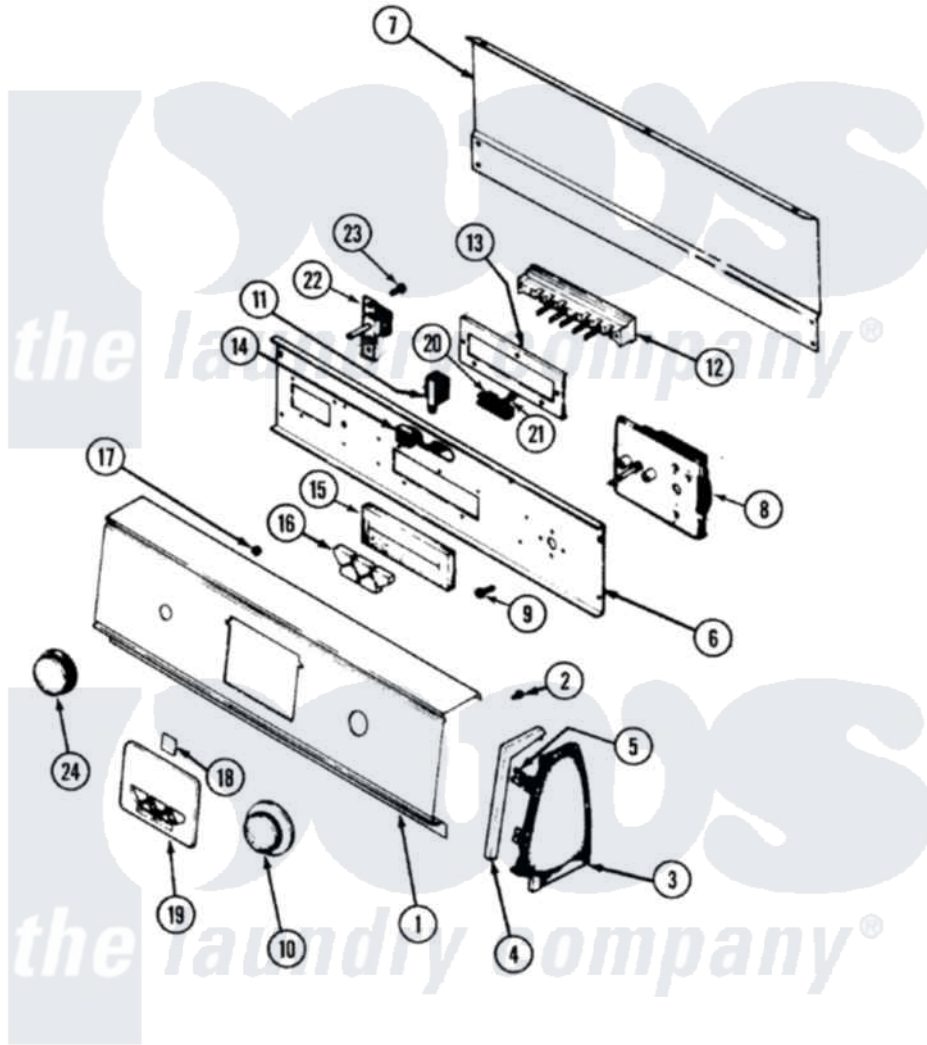

Magic Chef [Residential Magic Chef YG20JN5 Dryer Parts](#) Parts Diagram 01 - CONTROL PANEL (REV. A-D)(YG20JN5)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-1652		Not Available	CONTROL PANEL
2	25-7852			Speedclip, Rr Shld To End Cap
"	25-7435	33002917		Screw, No.10-16
"	25-3457			Screw, Sems
3	25-7697	25-2219		Screw
"	34-9487		Not Available	PLATE, REINFORCEMENT
"	25-7851			Speedclip, End Cap To Top
"	35-2668	21001453		Cap- End
"	35-2669		Not Available	CAP, END (LT)(WHT)
"	25-7702			Speedclip, End Cap To Control Panel
"	25-7649	910187		Screw
4	25-7760			Screw
"	53-0278		Not Available	TRIM, END CAP (LT)
"	53-0277		Not Available	TRIM, END CAP (RT)
5	25-3002	00767		Screw, 8A X 3/8 HeX Washer

			Head Tapping
"	25-7702		Speedclip, End Cap To Control Panel
6	35-2680	Not Available	CONTROL SHIELD
7	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
"	35-2688	21001460	Shield, Rear
"	25-3457		Screw, Sems
8	53-1816	Not Available	TIMER
"	53-1300	Not Available	TIMER
9	25-7435	33002917	Screw, No.10-16
"	25-0205	216412	Screw, Bracket To Timer
10	53-1671	53-2129	Knob, And Skirt Assembly
11	63-5685	63-5613	Timer
"	53-1666		Buzzer - Adjustable
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
12	53-1668	Not Available	SWITCH - 7 PUSHBUTTON
13	25-7712	Not Available	SCREW
"	33-6620	Not Available	BRACKET
"	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
14	35-0691-07	Not Available	LIGHT ASSY
"	35-0691-01	Not Available	SIGNAL LIGHT
"	35-0691-03	Not Available	SIGNAL LIGHT
"	35-0691-02	Not Available	SIGNAL LIGHT
15	33-8541	Not Available	SWITCH PAD
16	53-1640-01	Not Available	PUSHBUTTON (REGULAR)
"	53-1640-06	Not Available	PUSHBUTTON (OFF)
"	53-1640-05	Not Available	PUSHBUTTON(ON)
"	53-1640-04	Not Available	PUSHBUTTON (DELICATE)
"	53-1640-02	Not Available	PUSHBUTTON (PERMA PRESS)
"	53-1640-03	Not Available	PUSHBUTTON (FLUFF)
17	25-7882	Not Available	PALNUT
18	35-0690	Not Available	LENS
19	53-1636	Not Available	BEZEL (WHITE) 7 POSITION
"	53-1665	Not Available	LENS DRYER
20	35-2257	7401P037-60	Block, Terminal
21	25-7649	910187	Screw
22	53-0346	53-1263	Rotary Switch
23	25-3092	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	53-1675	Not Available	MANUAL, USE & CARE
"	53-1681	Not Available	KNOB, SELECTOR

the laundry company[®]