


Magic Chef YG224LM 02 - CONTROL PANEL

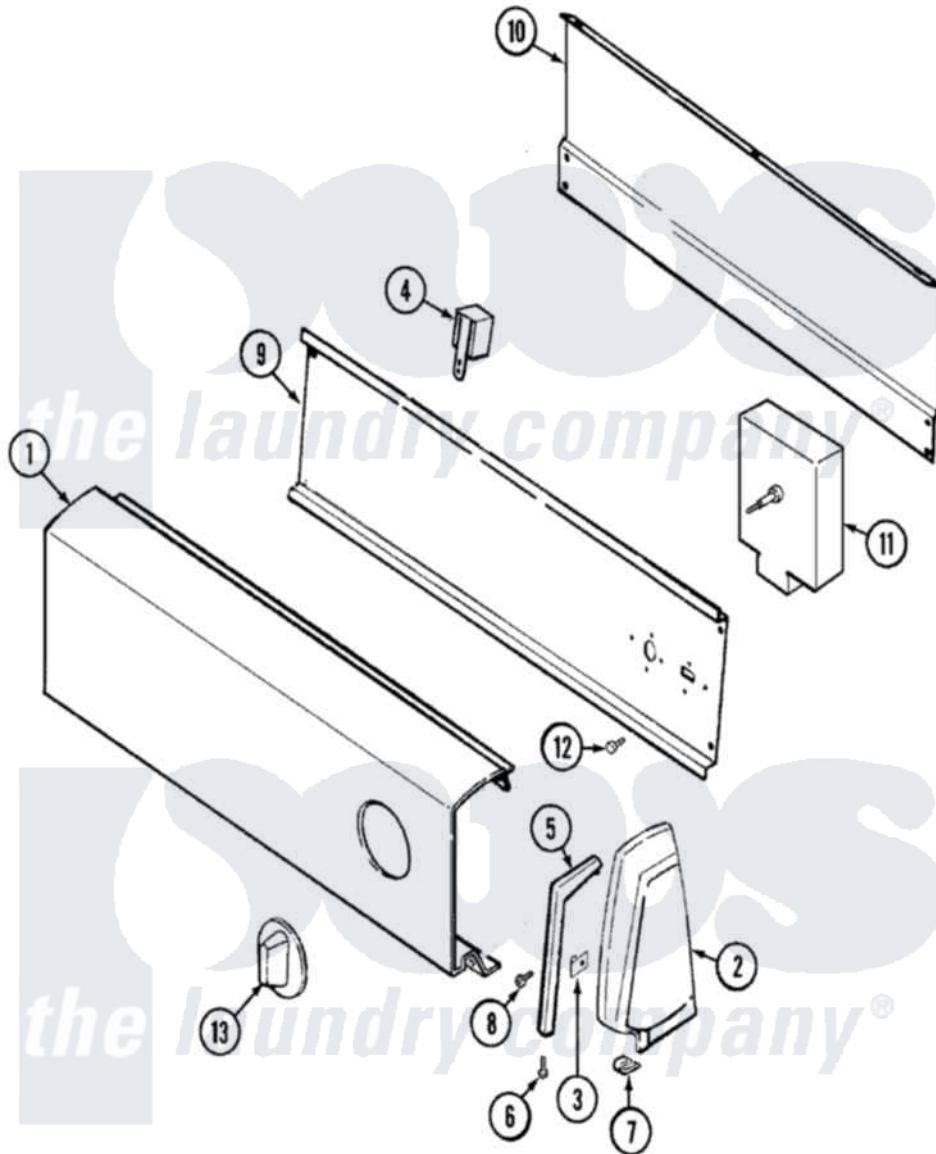

Magic Chef [Residential Magic Chef YG224LM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001148			Panel, Control
2	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-7702			Speedclip, End Cap To Control Panel
4	53-1639			Buzzer Assembly
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	25-7760			Screw
7	25-7851			Speedclip, End Cap To Top
8	25-7649	910187		Screw
9	53-2504	31001193		Pad, Shield
"	31001128		Not Available	SHIELD, CONTROL

10	35-2688	21001460	Shield, Rear
11	31001108		Timer
12	31001119	W10116760	Screw
13	31001089		Not Available
			KNOB & SKIRT ASSY.
14	16000329		Not Available
			GUIDE, QUICK REF. - MAGIC CHEF
"	31001120		Not Available
			MANUAL, USE & CARE
"	31001050		Not Available
			MANUAL, USE & CARE

