


Magic Chef YG224LM 03 - DOOR

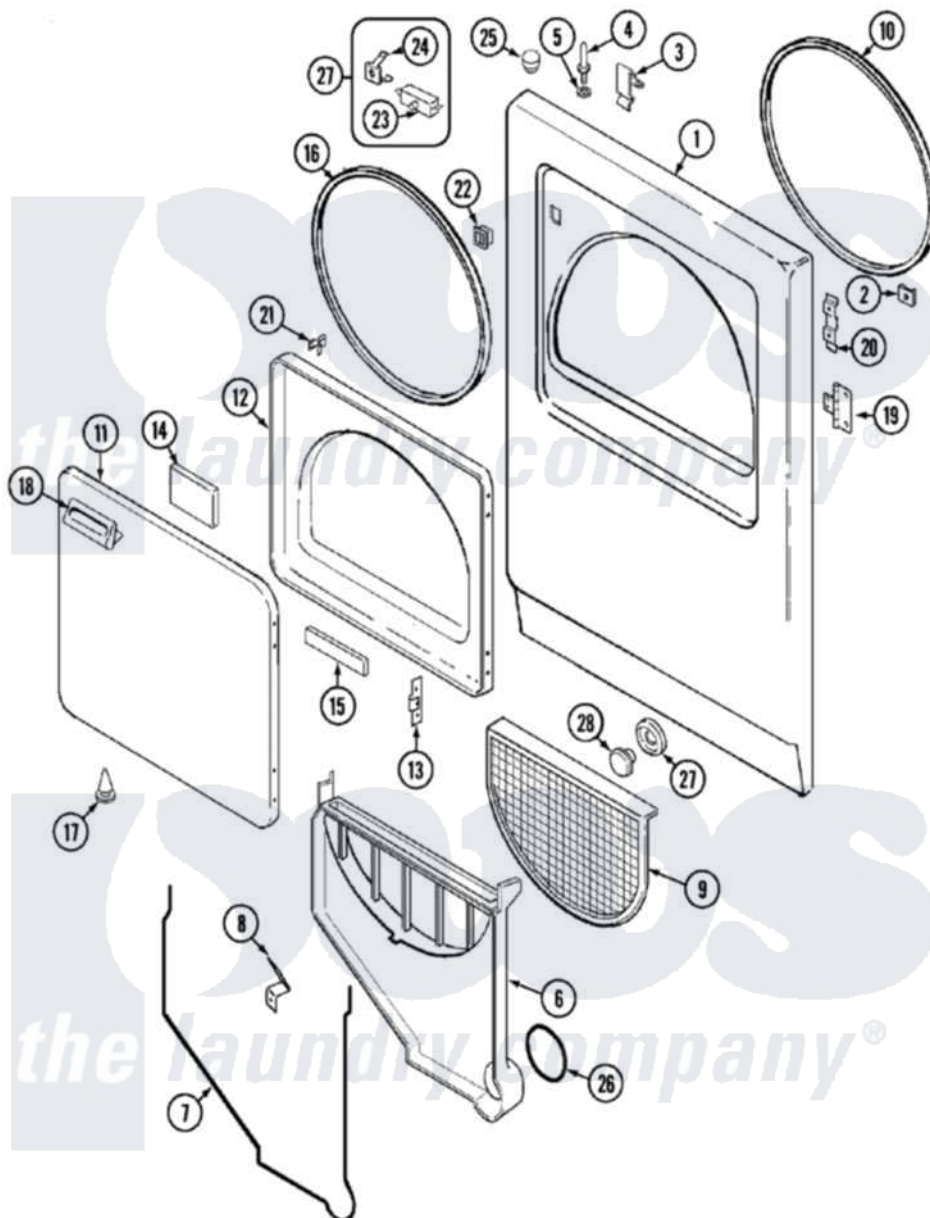

Magic Chef [Residential Magic Chef YG224LM Dryer Parts](#) Parts Diagram 03 - DOOR
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	53-0727-24		Not Available	PANEL, FRONT (ALM)GAS
2	25-7817		Not Available	CLIP, U-TYPE
"	25-7820	489478		Screw, 8 X 1/2
3	25-7220			Clip, Cabinet Top
4	53-0643			Pin, Locator
5	25-0224	3400029		Nut, Adapter Plate
"	53-0200			Sleeve, Locator Pin
6	25-7810	415013-35		Screw
"	53-1299	12001324		Duct Kit, Collector
7	53-0204			Seal
8	53-0123			Clip
9	53-0918			Filter, Lint
10	53-0282	31001637		Seal Assembly, Cylinder Front
11	25-7770	3196169		Screw, Element
"	53-0154-24			Panel, Outer Door
12	53-0912-24		Not Available	PANEL, INNER DOOR (ALM)

13	53-0119		Clip, Hinge
14	53-1490		Door Pad
15	53-1491		Door Pad
16	53-0648	31001529	Seal, Door
17	25-7889		Plug Button
18	31001115	31001482	Handle, Door
"	25-7810	415013-35	Screw
19	25-7809		Screw, No.6-20 1/2 Flthd Torx
"	53-1492		Hinge, Dryer Door
20	53-0121	Not Available	TWIN NUT
21	LA-1003		Door Catch Kit
"	53-2364	LA-1003	Door Catch Kit
22	53-0187	LA-1003	Door Catch Kit
23	53-0148		Switch, Door
24	63-5990	31001319	Clip, Switch
25	33-2653		Bumper, Cabinet
26	53-0203	12001324	Duct Kit, Collector
27	LA-1005		Switch Kit
28	53-0161	Not Available	PLUG, GAS ACCESS (ALM)
29	53-0162	Not Available	BUTTON, GAS ACCESS (ALM)

