


# Magic Chef YG225LM 02 - CONTROL PANEL

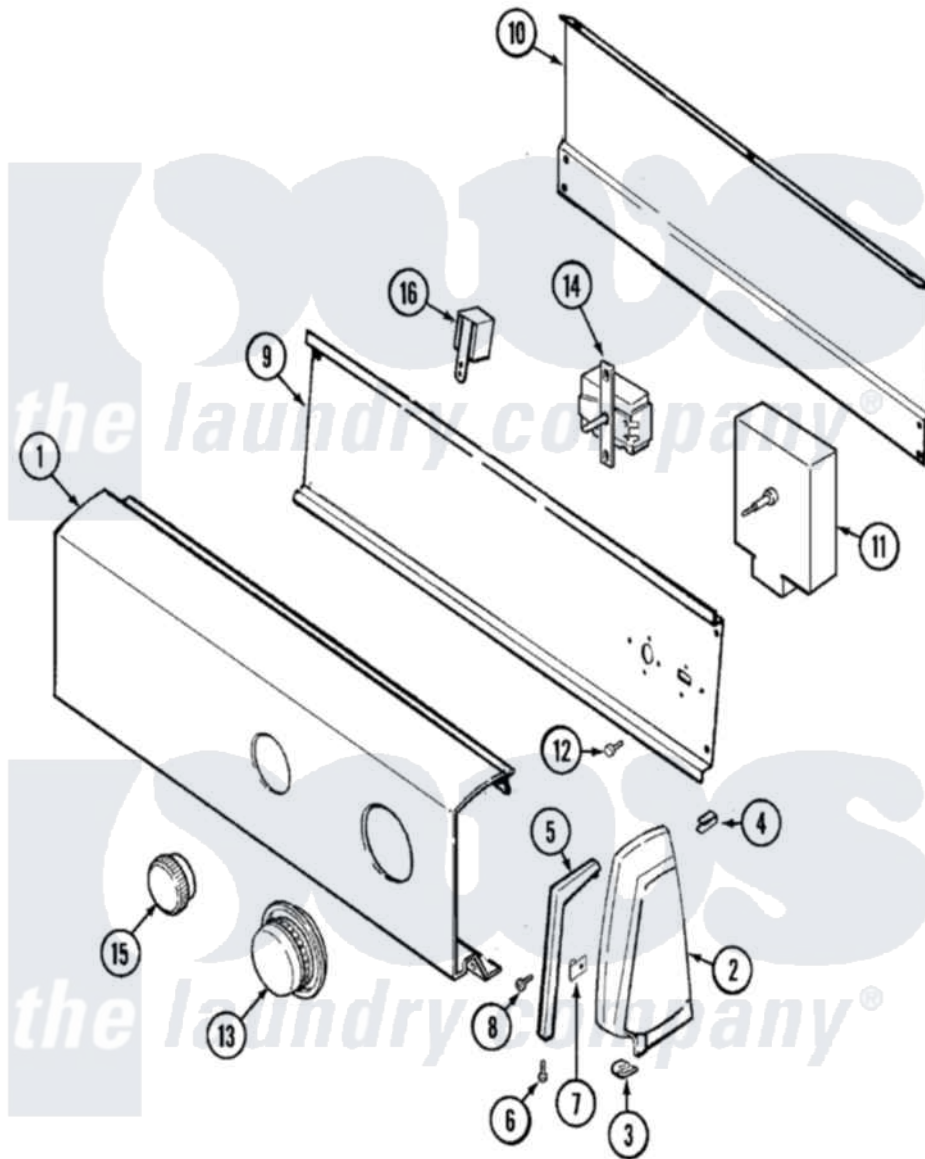

Magic Chef [Residential Magic Chef YG225LM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001135		Not Available	PANEL, CONTROL
2	<a href="#">25-7851</a>			Speedclip, End Cap To Top
"	21001069	<a href="#">12002263</a>		Endcap Kit
"	21001070	<a href="#">21001456</a>		Cap- End
"	25-3092	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
"	25-7649	<a href="#">910187</a>		Screw
3	25-7697	<a href="#">25-2219</a>		Screw
"	<a href="#">25-7851</a>			Speedclip, End Cap To Top
4	25-7435	<a href="#">33002917</a>		Screw, No.10-16
"	<a href="#">25-7852</a>			Speedclip, Rr Shld To End Cap
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	<a href="#">25-7760</a>			Screw
7	<a href="#">25-7702</a>			Speedclip, End Cap To Control Panel

8	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
9	31001146	<a href="#">31001193</a>	Pad, Shield
"	31001128	Not Available	SHIELD, CONTROL
10	35-2688	<a href="#">21001460</a>	Shield, Rear
11	<a href="#">53-1758</a>		Timer
12	31001119	<a href="#">W10116760</a>	Screw
13	31001089	Not Available	KNOB & SKIRT ASSY.
14	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	31001150	Not Available	SWITCH, HEAT
15	<a href="#">21001119</a>		Knob, Selector
16	25-3092	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
"	<a href="#">53-1639</a>		Buzzer Assembly
17	31001050	Not Available	MANUAL, USE & CARE
"	31001149	Not Available	MANUAL, USE & CARE
18	16000329	Not Available	GUIDE, QUICK REF. - MAGIC CHEF

