


Magic Chef YG228LM 02 - CONTROL PANEL

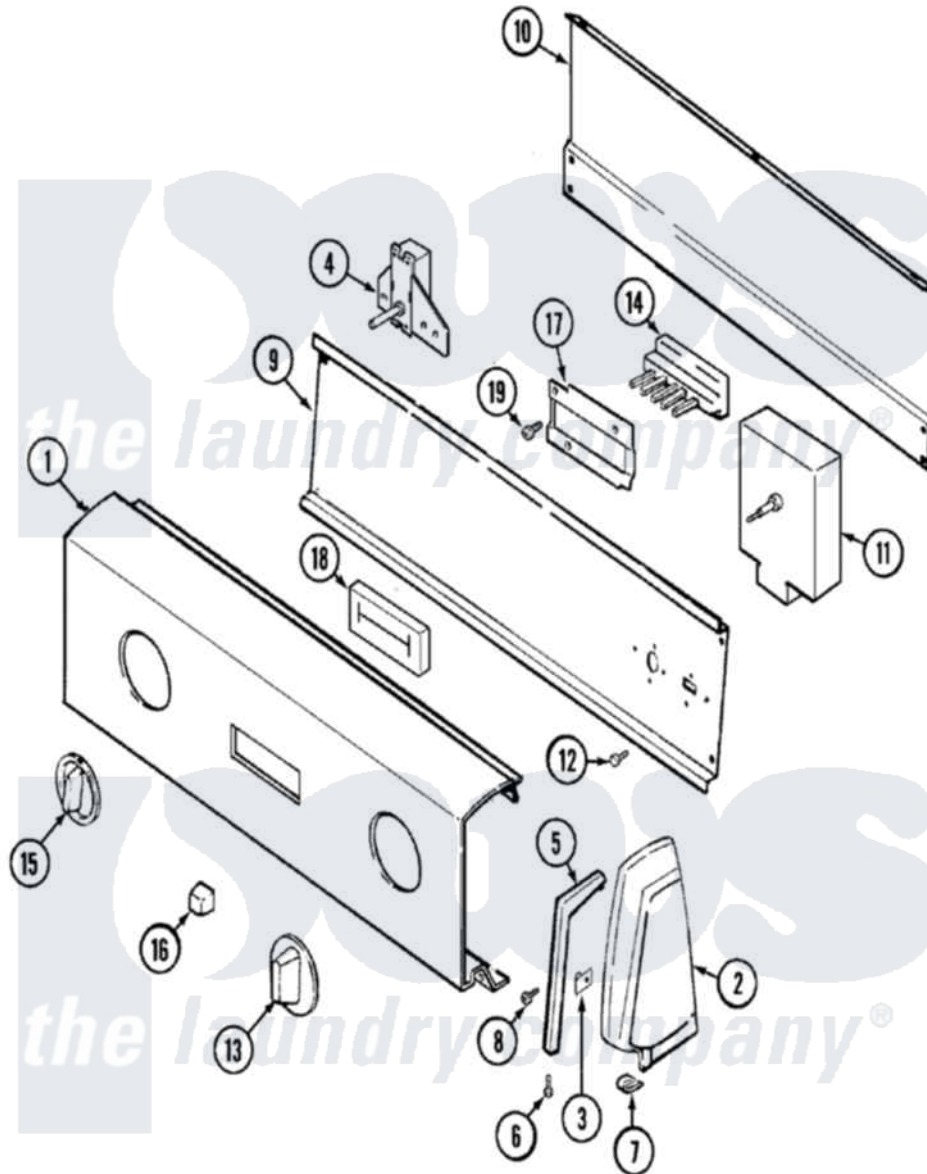

Magic Chef [Residential Magic Chef YG228LM Dryer Parts](#) Parts Diagram 02 - CONTROL PANEL
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	31001141		Not Available	PANEL, CONTROL
2	21001069	12002263		Endcap Kit
"	21001070	21001456		Cap- End
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
3	25-7702			Speedclip, End Cap To Control Panel
4	53-1666			Buzzer - Adjustable
"	25-3092	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
5	31001057		Not Available	TRIM, ENDCAP (LT)(ALM)
"	31001056		Not Available	TRIM, ENDCAP (RT)(ALM)
6	25-7760			Screw
7	25-7851			Speedclip, End Cap To Top
8	25-7649	910187		Screw
9	31001124			Shield, Control
"	31001193			Pad, Shield

"	31001146	31001193		Pad, Shield
10	35-2688	21001460		Shield, Rear
11	53-1816		Not Available	TIMER
12	31001119	W10116760		Screw
13	31001089		Not Available	KNOB & SKIRT ASSY.
14	25-7712		Not Available	SCREW
"	53-2416			Switch, 5 Pushbutton
"	31001242		Not Available	SWITCH, PUSHBUTTON
15	21001119			Knob, Selector
16	21001118			Pushbutton
17	33-6621		Not Available	BRACKET, SWITCH
18	35-3394		Not Available	PAD, SWITCH
19	25-3092	90767		Screw, 8A X 3/8 Hex Washer Head Tapping
20	31001050		Not Available	MANUAL, USE & CARE
"	16000329		Not Available	GUIDE, QUICK REF. - MAGIC CHEF
"	31001151		Not Available	MANUAL, USE & CARE

