


# Maytag 3LMVWC400YW0 02 - CONSOLE AND WATER INLET PARTS

## CONSOLE AND WATER INLET PARTS

For Model: 3LMVWC400YW0  
(White)

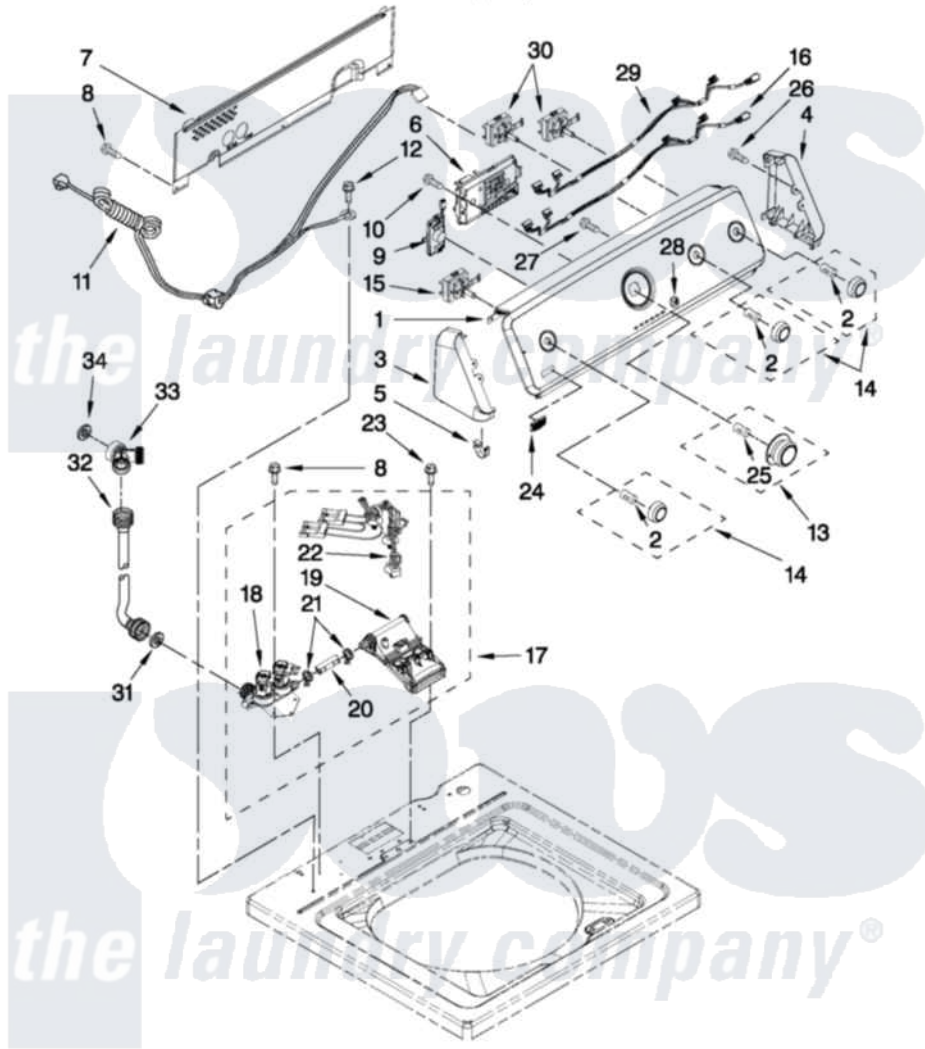

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

W10499057

3

Maytag Residential Maytag 3LMVWC400YW0 Washer Parts Parts Diagram 02 - CONSOLE AND WATER INLET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">W10464667</a>			Panel, Console
2	<a href="#">8536939</a>			Clip, Knob
3	<a href="#">W10193826</a>			Cap, End
4	<a href="#">W10193823</a>			Cap, End
5	<a href="#">8312709</a>			Clip-Console
6	<a href="#">W10480700</a>			Control Unit Assembly, Machine And Motor
7	<a href="#">W10420985</a>			Panel, Console Rear Cover
8	1157158	<a href="#">489069</a>		Xxscrew, 10-12 X 1/2
9	<a href="#">W10434306</a>			Filter, Line Assembly
10	<a href="#">90767</a>			Screw, 8A X 3/8 HeX Washer Head Tapping
11	<a href="#">W10446856</a>			Cord, Power
NI	N/P		Not Available	PARTS NOT SHOWN
"	<a href="#">W10446855</a>			10A Cord Lock
"	<a href="#">W10476822</a>			10A Cord Adapters:
"	<a href="#">W10476820</a>			10A Cord Adapters:

"	<a href="#">W10474959</a>		10A Cord Adapters:
12	<a href="#">3400076</a>		Screw, Bracket Mounting
13	<a href="#">W10317454</a>		Timer Knob And Dial Assembly
14	<a href="#">W10317455</a>		Knob, Push-To-Start
15	<a href="#">W10285511</a>		Switch, Rotary Encoder
16	<a href="#">W10291177</a>		Harness, Upper
17	<a href="#">W10360889</a>		Inlet Assembly, Water
18	W10356260	Not Available	VALVE, WATER MIXING
19	<a href="#">W10441423</a>		Vacuum Break
20	<a href="#">W10238347</a>		Hose, Vacuum Break
21	W10117298	<a href="#">596669</a>	Clamp, Manifold
22	W10474662	Not Available	HARNESS, VALVE
23	<a href="#">8281163</a>		Screw, Dispenser Housing Mounting
24	<a href="#">W10323734</a>		Badge, Assembly
25	<a href="#">688805</a>		Clip, Spring Knob
26	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
27	<a href="#">3400073</a>		Screw, Ground
28	<a href="#">W10251309</a>		Pushbutton, Start
29	<a href="#">W10481152</a>		Harness, Upper
30	<a href="#">W10285512</a>		Switch, Rotary Encoder
31	W10242307	<a href="#">16123</a>	Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
32	<a href="#">3949383</a>		Hose, Water Inlet
"	<a href="#">3949382</a>		Hose, Water Inlet
33	<a href="#">W10269488</a>		Connector- Hose, Y
34	<a href="#">3357450</a>		Washer, Water Inlet Hose

*the laundry company*<sup>®</sup>

**lows**  
*the laundry company*<sup>®</sup>