


Maytag 61C 03 - FRONT VIEW (61C)

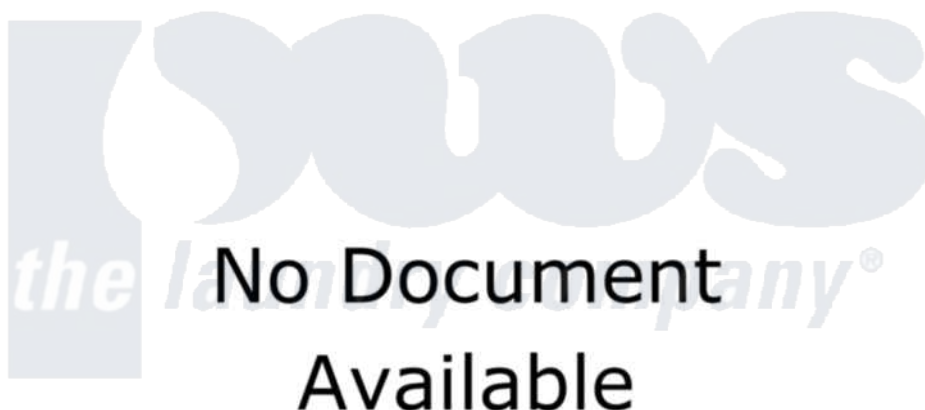

[Maytag Residential Maytag 61C Dryer Parts](#) Parts Diagram 03 - FRONT VIEW (61C)

[Click on the part number to view part](#)

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|---------------------------|---------------|---|
| 1 | 300054 | 300-054 | | Setback Wall Tstat, 24V, Gas, Heating/Cooling, 5-Wire |
| 2 | Y300059 | | Not Available | MICRO SWITCH---NA |
| 3 | 300134 | | | Panel For Door W/Hinges-Outer |
| 4 | 300201 | | Not Available | TOEBOARD |
| 5 | 300209 | 300-209 | | Single Setpoint Control 1 |
| 6 | 300254 | | Not Available | THERMOSTAT |
| 7 | 300259 | | Not Available | BRACKET & SCREEN ASSY |
| 8 | 300262 | | Not Available | TIMER |
| 9 | 300402 | | Not Available | LINT DRAWER |
| 10 | 300416 | | Not Available | DRUM ASSEMBLY |
| 11 | 300445 | 675274 | | Washer |
| 12 | 300446 | W10254672 | | Adapter Faucet |
| 13 | 301029 | | Not Available | DOOR HANDLE |
| 14 | 302984 | | | Baffle Assembly - Poly |
| 15 | 310074 | 8316805 | | Light-Ind |

| | | | | |
|----|-------------------------|---------------------------|---------------|------------------------------|
| 16 | 310089 | | Not Available | TENSION SPRING |
| 17 | 310113 | | Not Available | TIMER DIAL |
| 18 | 310114 | | Not Available | TEMP CONTROL DIAL |
| 19 | 310219 | | | No. 10z Fastener |
| 20 | 310400 | WR71X5885 | | Shelf Assembly |
| 21 | 310419 | | Not Available | PANEL FOR LINT DRYER |
| 22 | 310420 | | Not Available | SPRING CATCH FOR LINT DRYER |
| 23 | 310429 | | Not Available | END CAP |
| 24 | 310553 | | Not Available | ADJUSTABLE BRACKET |
| 25 | 310558 | | Not Available | SCREW, LINT SCREEN TO PANEL |
| 26 | 310578 | | Not Available | WASHER |
| 27 | 310579 | | Not Available | SCREW, No.10-24 X 11/16 INCH |
| 28 | Y310630 | | | Door Seal |
| 29 | 310703 | | Not Available | SCREW, No.10-24 X 3/8 INCH |
| 30 | 310768 | | Not Available | WASHER |
| 31 | 310934 | 22003428 | | Leg, Adjustable |
| 32 | 200490 | | Not Available | CONTROL KNOB |
| 33 | 200522 | | Not Available | NAME PLATE |
| 34 | 210140 | | Not Available | TINNERMAN CLIP FOR TOEBOARD |
| 35 | 210385 | | | Lock Nut For Adjustable Leg |
| 36 | 210442 | | Not Available | WASHER NYLON |
| 37 | 210590 | | Not Available | SPEED NUT |
| 38 | 210609 | | | Nylon Washer |
| 39 | 210684 | | | Foot, Adjustable Leg |
| 40 | 210837 | | Not Available | NAMEPLATE |
| 41 | 210838 | | Not Available | TRIM FOR NAMEPLATE |
| 42 | 210839 | | Not Available | SCREW, SELF-TAPPING |
| 43 | 211739 | | | Screw, Cabinet To Base |

