



[Maytag Residential Maytag 640W Dryer Parts Parts Diagram 04 - FRONT VIEW](#)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	300054	300-054		Setback Wall Tstat, 24V, Gas, Heating/Cooling, 5-Wire
2	Y300059		Not Available	MICRO SWITCH---NA
3	300198		Not Available	ANGLE & BRKT ASSY FOR CABNT
4	300227		Not Available	PANEL FOR DOOR W/HINGES OUTER
5	300259		Not Available	BRACKET & SCREEN ASSY
6	300290		Not Available	TIMER
7	300416		Not Available	DRUM ASSEMBLY
8	300531		Not Available	THUMB STUD
9	300535		Not Available	ACCESS PLATE FOR DRUM
10	300536		Not Available	COVER FOR CONTROL PANEL
11	Y300538		Not Available	FLUORESCENT LAMP
12	300541		Not Available	COVER FOR CONTROL PANEL
13	300543		Not Available	THERMOSTAT

14	300562		Not Available	BACK PANEL & PAD
15	300574		Not Available	SCREW & LOCK WASHER ASSY
16	301029		Not Available	DOOR HANDLE
17	301272		Not Available	FASTENER BRACKET
18	301312		Not Available	FRONT PANEL
19	301448		Not Available	DOOR COMPLETE
20	Y302000			Heater Coil With Frame
21	302984			Baffle Assembly - Poly
22	310074	8316805		Light-Ind
23	310089		Not Available	TENSION SPRING
24	310217		Not Available	No Longer Available
25	310219			No.10z Fastener
26	310226		Not Available	WASHER
27	310351		Not Available	TRIM STRIP FOR FRONT PANEL
28	310377		Not Available	TINNERMAN NUT-TOP COVER
29	Y310386	Y014874		Screw, Idler Arm And Sleeve
30	310420		Not Available	SPRING CATCH FOR LINT DRYER
31	310468		Not Available	PANEL FOR LINT TRAP DRAWER
32	310553		Not Available	ADJUSTABLE BRACKET
33	310558		Not Available	SCREW, LINT SCREEN TO PANEL
34	310559		Not Available	NUT-DRAWER FRONT TO LINT TRAP
35	310578		Not Available	WASHER
36	310579		Not Available	SCREW, No.10-24 X 11/16 INCH
37	310583		Not Available	WASHER
38	310607		Not Available	SCREW,DATA PLATE TO CABINET
39	Y310630			Door Seal
40	Y310632	1163839		Screw
41	310703		Not Available	SCREW, No.10-24 X 3/8 INCH
42	310732		Not Available	CONTROL PANEL
43	310734			Timer Dial
44	310735		Not Available	GLASS PANEL, RIGHT
45	310736		Not Available	GLASS PANEL, LEFT
46	310754		Not Available	WASHER (STAINLESS STEEL)
47	Y310759			Screw, Tumbler Baffles
48	310768		Not Available	WASHER
49	310934	22003428		Leg, Adjustable
50	311339		Not Available	SET SCREW
51	Y311916	22003781		Screw, Ground Strap
52	312207		Not Available	TERMINAL COVER
53	200860		Not Available	RECEPTACLE FOR LAMP-RIGHT
54	200862		Not Available	BALLAST
55	200866		Not Available	SOCKET-PILOT LAMP
56	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
57	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
58	210310	31001575		Bulb, Cylinder Light

59	210385		Lock Nut For Adjustable Leg
60	210590	Not Available	SPEED NUT
61	210609		Nylon Washer
62	210684		Foot, Adjustable Leg
63	210830	Not Available	MEDALLION
64	210865	Not Available	FASTENER
65	210866		Nut, Twin Speed
66	210879	Not Available	SCREW, No.8 X 1/2 INCH
67	210887	12990527	Screw-Sm/Hex
68	211243	Not Available	TIMER KNOB
69	211244	Not Available	GASKET
70	211245	Not Available	SPRING CLIP-CONTROL COVER-REAR
71	211246	Not Available	SPRING CLIP
72	211247	Not Available	RETAINER
73	211250		Fastener
74	211252		Screw, Ground Wire
75	211962		Spring Clip
76	212275	Not Available	SCREW, CABINET TO BASE
77	Y052721		Nut, Terminal Block Plate
78	Y054858	486009	Lockwasher

