



[Maytag Residential Maytag 740C Dryer Parts](#) Parts Diagram 04 - CONTROL PANEL
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	300290		Not Available	TIMER
2	Y300538		Not Available	FLUORESCENT LAMP
3	300541		Not Available	COVER FOR CONTROL PANEL
4	300551			Thermostat
5	300552		Not Available	LAMP SOCKET
6	310732		Not Available	CONTROL PANEL
7	310734			Timer Dial
8	310735		Not Available	GLASS PANEL, RIGHT
9	310736		Not Available	GLASS PANEL, LEFT
10	310743		Not Available	FASTENER
11	310744		Not Available	SCREW-LAMP RECEPTACLE TO BRACK
12	310745		Not Available	SCREW, No.4 X 3/4 INCH
13	310844	W10068250		Screw
14	200046		Not Available	CONNECTOR, FEMALE
15	200272		Not Available	CONNECTOR, 3 WIRE

16	200860	Not Available	RECEPTACLE FOR LAMP-RIGHT
17	200862	Not Available	BALLAST
18	201580	Not Available	SWITCH FOR FLUORESCENT LAMP
19	202807	Not Available	RECEPT FOR FLUORESCENT LAMP
20	210310	31001575	Bulb, Cylinder Light
21	211238	Not Available	PANEL BRACKET, LEFT
22	211239	Not Available	PANEL BRACKET, RIGHT
23	211243	Not Available	TIMER KNOB
24	211244	Not Available	GASKET
25	211245	Not Available	SPRING CLIP-CONTROL COVER-REAR
26	211246	Not Available	SPRING CLIP
27	211247	Not Available	RETAINER
28	211249	Not Available	FASTENER
29	211250		Fastener
30	211252		Screw, Ground Wire
31	211293	Not Available	SCREW, No.8 X 1/2 INCH
32	211294	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
33	304586	Not Available	TIMER MOTOR

