

# Maytag 740C 05 - FRONT VIEW



[Maytag Residential Maytag 740C Dryer Parts](#) Parts Diagram 05 - FRONT VIEW  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	300054	<a href="#">300-054</a>		Setback Wall Tstat, 24V, Gas, Heating/Cooling, 5-Wire
2	Y300059		Not Available	MICRO SWITCH---NA
3	300290		Not Available	TIMER
4	300416		Not Available	DRUM ASSEMBLY
5	300422		Not Available	WIRE HARNESS
6	300424	<a href="#">3370639</a>		Caster
7	300445	<a href="#">675274</a>		Washer
8	300531		Not Available	THUMB STUD
9	300535		Not Available	ACCESS PLATE FOR DRUM
10	Y300538		Not Available	FLUORESCENT LAMP
11	300541		Not Available	COVER FOR CONTROL PANEL
12	<a href="#">300551</a>			Thermostat
13	300552		Not Available	LAMP SOCKET
14	301029		Not Available	DOOR HANDLE
15	301272		Not Available	FASTENER BRACKET

16	301312		Not Available	FRONT PANEL
17	<a href="#">Y302278</a>			Motor
18	<a href="#">302984</a>			Baffle Assembly - Poly
19	310074	<a href="#">8316805</a>		Light-Ind
20	310089		Not Available	TENSION SPRING
21	310217		Not Available	No Longer Available
22	<a href="#">310219</a>			No.10z Fastener
23	310351		Not Available	TRIM STRIP FOR FRONT PANEL
24	310377		Not Available	TINNERMAN NUT-TOP COVER
25	310420		Not Available	SPRING CATCH FOR LINT DRYER
26	310468		Not Available	PANEL FOR LINT TRAP DRAWER
27	<a href="#">310551</a>			Fastener
28	310552		Not Available	SPRING CLIP
29	310553		Not Available	ADJUSTABLE BRACKET
30	310558		Not Available	SCREW, LINT SCREEN TO PANEL
31	310559		Not Available	NUT-DRAWER FRONT TO LINT TRAP
32	304586		Not Available	TIMER MOTOR
33	310579		Not Available	SCREW, No.10-24 X 11/16 INCH
34	<a href="#">Y310630</a>			Door Seal
35	Y310632	<a href="#">1163839</a>		Screw
36	310703		Not Available	SCREW, No.10-24 X 3/8 INCH
37	310732		Not Available	CONTROL PANEL
38	<a href="#">310734</a>			Timer Dial
39	310735		Not Available	GLASS PANEL, RIGHT
40	310736		Not Available	GLASS PANEL, LEFT
41	310768		Not Available	WASHER
42	Y302699	<a href="#">22003428</a>		Leg, Adjustable
43	311339		Not Available	SET SCREW
44	Y311916	<a href="#">22003781</a>		Screw, Ground Strap
45	200860		Not Available	RECEPTACLE FOR LAMP-RIGHT
46	200862		Not Available	BALLAST
47	201580		Not Available	SWITCH FOR FLUORESCENT LAMP
48	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
49	210310	<a href="#">31001575</a>		Bulb, Cylinder Light
50	<a href="#">210385</a>			Lock Nut For Adjustable Leg
51	<a href="#">210609</a>			Nylon Washer
52	<a href="#">210684</a>			Foot, Adjustable Leg
53	210830		Not Available	MEDALLION
54	210865		Not Available	FASTENER
55	210879		Not Available	SCREW, No.8 X 1/2 INCH
56	211243		Not Available	TIMER KNOB
57	211244		Not Available	GASKET
58	211245		Not Available	SPRING CLIP-CONTROL COVER-REAR
59	211246		Not Available	SPRING CLIP
60	211247		Not Available	RETAINER
61	<a href="#">211250</a>			Fastener

