



[Maytag Residential Maytag 741C Dryer Parts](#) Parts Diagram 04 - CONTROL PANEL
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	304895			Timer Motor 120-60
2	Y300538		Not Available	FLUORESCENT LAMP
3	300541		Not Available	COVER FOR CONTROL PANEL
4	300552		Not Available	LAMP SOCKET
5	301006		Not Available	TEMPERATURE SWITCH
6	301010			Chime
7	301130		Not Available	TIMER
8	310744		Not Available	SCREW-LAMP RECEPTACLE TO BRACK
9	310844	W10068250		Screw
10	311181		Not Available	TIMER DIAL
11	311183		Not Available	GLASS PANEL, RIGHT
12	311184		Not Available	GLASS PANEL, LEFT
13	311259		Not Available	SCREW, No.4-36 X 1/2 INCH
14	311266		Not Available	SPRING
15	311387		Not Available	CONTROL KNOB

16	200860		Not Available	RECEPTACLE FOR LAMP-RIGHT
17	200862		Not Available	BALLAST
18	201110		Not Available	WIRE CONNECTOR
19	202807		Not Available	RECEPT FOR FLUORESCENT LAMP
20	210198			Fastener
21	210310	31001575		Bulb, Cylinder Light
22	211238		Not Available	PANEL BRACKET, LEFT
23	211239		Not Available	PANEL BRACKET, RIGHT
24	211244		Not Available	GASKET
25	211245		Not Available	SPRING CLIP-CONTROL COVER-REAR
26	211246		Not Available	SPRING CLIP
27	211247		Not Available	RETAINER
28	211249		Not Available	FASTENER
29	211250			Fastener
30	211252			Screw, Ground Wire
31	211293		Not Available	SCREW, No.8 X 1/2 INCH
32	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
33	211410			Screw, HeX Head No.8 X 3/8 Inch
34	213077		Not Available	CAP FOR TIMER KNOB

