



[Maytag Residential Maytag 741C Dryer Parts](#) Parts Diagram 07 - WIRING & CONTROLS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	304895			Timer Motor 120-60
2	Y300059		Not Available	MICRO SWITCH---NA
3	300268			High Limit Thermostat
4	300249	675659		Gasket
5	300552		Not Available	LAMP SOCKET
6	305864			Thermostat Kit
7	300966		Not Available	No.4 WIRE WITH TERMINAL
8	301006		Not Available	TEMPERATURE SWITCH
9	Y301007			Thermostat
10	301010			Chime
11	301018		Not Available	No.22 WIRE WITH TERMINALS
12	301019		Not Available	No.21 WIRE WITH TERMINALS
13	301020		Not Available	No.20 WIRE WITH TERMINALS
14	302521		Not Available	CORD, POWER PART NOT USED-GAS MODELS ONLY

15	301130		Not Available	TIMER
16	311266		Not Available	SPRING
17	Y311916	22003781		Screw, Ground Strap
18	200862		Not Available	BALLAST
19	201110		Not Available	WIRE CONNECTOR
20	210310	31001575		Bulb, Cylinder Light
21	211737	248562		Terminal

