

Maytag 75C 04 - FRONT VIEW (75C)



[Maytag Residential Maytag 75C Dryer Parts](#) Parts Diagram 04 - FRONT VIEW (75C)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	300259		Not Available	BRACKET & SCREEN ASSY
2	300268			High Limit Thermostat
3	300445	675274		Washer
4	300582		Not Available	ACCESS PLATE
5	301002	301102		Timer
6	300588		Not Available	PANEL COVER
7	300589		Not Available	TOP COVER
8	300592		Not Available	HINGE
9	300595		Not Available	KNOB AND DIAL
10	300596			Door Switch
11	300608		Not Available	THERMOSTAT
12	300611		Not Available	MAIN WIRE HARNESS
13	310589		Not Available	SHAKEPROOF STUD
14	310607		Not Available	SCREW,DATA PLATE TO CABINET
15	Y310632	1163839		Screw
16	310703		Not Available	SCREW, No.10-24 X 3/8 INCH

17	310774		Not Available	CABINET TRIM
18	310775		Not Available	TRIM RETAINER
19	310779	4330903		Knob Surf
20	Y310780			Strike Button
21	310795		Not Available	DOOR SEAL
22	310797		Not Available	GAS SYMBOL FOR CONTROL PANEL
23	310841		Not Available	PLUG BUTTON
24	310844	W10068250		Screw
25	Y302699	22003428		Leg, Adjustable
26	310935		Not Available	FASTENER
27	Y311413			Dyalon Washer
28	311414			Latch Bracket
29	Y311499	W10068260		Screw
30	Y311916	22003781		Screw, Ground Strap
31	210294	910309		Washer, Mounting Strap
32	210385			Lock Nut For Adjustable Leg
33	210590		Not Available	SPEED NUT
34	210609			Nylon Washer
35	210684			Foot, Adjustable Leg
36	210830		Not Available	MEDALLION
37	210865		Not Available	FASTENER
38	210879		Not Available	SCREW, No. 8 X 1/2 INCH
39	210887	12990527		Screw-Sm/Hex
40	211114		Not Available	RETAINER FOR TRIM
41	211196			Acorn Nut
42	211970		Not Available	SCREW-TOP COVER TO CABINET
43	212275		Not Available	SCREW, CABINET TO BASE
44	053654		Not Available	SCREW, No.5-40 X 3/8
45	054580		Not Available	SCREW, No.10-32 X 1/4

