



[Maytag Residential Maytag A100S Washer Parts](#) Parts Diagram 04 - ELECTRICAL PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200729			Timer
2	200733		Not Available	SWITCH-TEMPERATURE CONTROL
3	200806			Solenoid
4	200977			Solenoid For Water Valve
5	200996		Not Available	TIMER MOTOR, A
6	201012		Not Available	ESCAPEMENT FOR TIMER
8	201124		Not Available	UNBALANCE LEVER
9	201805	12002351		Motor-Drive
10	201809			Lid Switch
11	201956		Not Available	MOTOR CORD
14	211065			Spring, Index Wheel
15	211091		Not Available	TIMER DIAL
16	211092		Not Available	CAP, KNOB
17	211093		Not Available	RETAINER
18	211120			Knob, Timer
19	211251			Screw, Transformer

