



[Maytag Residential Maytag A102 Washer Parts](#) Parts Diagram 04 - ELECTRICAL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	200806			Solenoid
3	200977			Solenoid For Water Valve
4	200996		Not Available	TIMER MOTOR, A
5	201012		Not Available	ESCAPEMENT FOR TIMER
6	201124		Not Available	UNBALANCE LEVER
7	201781			Temperature Switch
9	201805	12002351		Motor-Drive
10	Y201808			Converter
11	201956		Not Available	MOTOR CORD
13	201985		Not Available	WIRE HARNESS
14	202770	279347		Switch-Lid
15	202923			Timer
16	210175		Not Available	WIRE CONNECTOR
17	211065			Spring, Index Wheel
18	211225		Not Available	PAD FOR UNBALANCE BUMPER

19	211251		Screw, Transformer
21	211586	Not Available	SCREW, No.8 X 7/8 INCH
22	211587	Not Available	SCREW, No.8 X 1/4 INCH
23	211605		Bezel, Timer Dial
24	211737	248562	Terminal
25	211835	Not Available	CONTROL KNOB - TIMER
26	212027		Timer Dial-Gray
27	212220	213501	Screw, No.6-20 X 1-1/8 Inch
28	212813		Pin For Lid Switch
29	212814	204968	Plunger And Bracket Assembly--W
30	213077	Not Available	CAP FOR TIMER KNOB
31	Y310376		Clip, Door Switch Harness
32	053759	25-7614	Screw

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]