



[Maytag Residential Maytag A103 Washer Parts](#) Parts Diagram 04 - ELECTRICAL PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	<a href="#">200806</a>			Solenoid
3	<a href="#">200977</a>			Solenoid For Water Valve
4	200996		Not Available	TIMER MOTOR, A
5	201124		Not Available	UNBALANCE LEVER
6	<a href="#">201750</a>			Timer RPR
7	201754		Not Available	PRESSURE SWITCH
9	<a href="#">201781</a>			Temperature Switch
11	201805	<a href="#">12002351</a>		Motor-Drve
12	<a href="#">Y201808</a>			Converter
13	201956		Not Available	MOTOR CORD
14	202208		Not Available	ESCAPEMENT FOR TIMER
15	<a href="#">202247</a>			Wire Harness
16	202770	<a href="#">279347</a>		Switch-Lid
17	210175		Not Available	WIRE CONNECTOR
18	<a href="#">211065</a>			Spring, Index Wheel

19	211168	<a href="#">W10139210</a>		Screw, 8-18 X 5/16
20	211225		Not Available	PAD FOR UNBALANCE BUMPER
21	<a href="#">211251</a>			Screw, Transformer
22	211586		Not Available	SCREW, No.8 X 7/8 INCH
23	211587		Not Available	SCREW, No.8 X 1/4 INCH
24	<a href="#">211605</a>			Bezel, Timer Dial
25	211737	<a href="#">248562</a>		Terminal
26	211835		Not Available	CONTROL KNOB - TIMER
27	212008		Not Available	TIMER DIAL
29	212220	<a href="#">213501</a>		Screw, No.6-20 X 1-1/8 Inch
30	<a href="#">212813</a>			Pin For Lid Switch
31	212814	<a href="#">204968</a>		Plunger And Bracket Assembly--W
32	213077		Not Available	CAP FOR TIMER KNOB
33	<a href="#">Y310376</a>			Clip, Door Switch Harness
34	053759	<a href="#">25-7614</a>		Screw

