



Maytag [Residential Maytag A103S Washer Parts](#) Parts Diagram 05 - ELECTRICAL PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	200806			Solenoid
3	200977			Solenoid For Water Valve
4	200996		Not Available	TIMER MOTOR, A
5	201124		Not Available	UNBALANCE LEVER
6	201750			Timer RPR
7	201754		Not Available	PRESSURE SWITCH
8	201759			Timer
10	201782			Temperature Switch
11	201805	12002351		Motor-Drve
12	Y201808			Converter
13	201956		Not Available	MOTOR CORD
14	202208		Not Available	ESCAPEMENT FOR TIMER
16	202770	279347		Switch-Lid
17	210175		Not Available	WIRE CONNECTOR
18	211065			Spring, Index Wheel

19	211168	W10139210		Screw, 8-18 X 5/16
20	211225		Not Available	PAD FOR UNBALANCE BUMPER
21	211251			Screw, Transformer
22	211586		Not Available	SCREW, No.8 X 7/8 INCH
23	211587		Not Available	SCREW, No.8 X 1/4 INCH
24	211605			Bezel, Timer Dial
25	211737	248562		Terminal
26	211835		Not Available	CONTROL KNOB - TIMER
28	212012		Not Available	TIMER DIAL
29	212220	213501		Screw, No.6-20 X 1-1/8 Inch
30	212813			Pin For Lid Switch
31	212814	204968		Plunger And Bracket Assembly--W
32	213077		Not Available	CAP FOR TIMER KNOB
33	Y310376			Clip, Door Switch Harness
34	053759	25-7614		Screw

