

Maytag A103S 06 - FRONT VIEW



[Maytag Residential Maytag A103S Washer Parts](#) Parts Diagram 06 - FRONT VIEW
Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|------------------------|--------------------------|---------------|-------------------------|
| 1 | 200555 | | Not Available | AGITATOR |
| 2 | 200727 | | Not Available | DIVERTER VALVE |
| 3 | 200746 | | Not Available | WATER VALVE---NA |
| 4 | 201124 | | Not Available | UNBALANCE LEVER |
| 5 | 201747 | | Not Available | CONTROL PANEL |
| 7 | 201754 | | Not Available | PRESSURE SWITCH |
| 8 | 201759 | | | Timer |
| 10 | 201782 | | | Temperature Switch |
| 11 | 201805 | 12002351 | | Motor-Drve |
| 12 | 201956 | | Not Available | MOTOR CORD |
| 13 | 202055 | | Not Available | COVER FOR CONTROL PANEL |
| 15 | 202292 | | Not Available | CABINET |
| 16 | Y202734 | 215058 | | Pad, Cabinet Bumper |
| 17 | 202770 | 279347 | | Switch-Lid |
| 18 | 204716 | | Not Available | BUTTON KIT FOR 2-1754 |
| 19 | 204717 | | Not Available | BUTTON KIT FOR 2-1782 |

| | | | | |
|----|-------------------------|---------------------------|---------------|---|
| 21 | 210175 | | Not Available | WIRE CONNECTOR |
| 22 | 210442 | | Not Available | WASHER NYLON |
| 23 | 210609 | | | Nylon Washer |
| 24 | 210684 | | | Foot, Adjustable Leg |
| 25 | 210865 | | Not Available | FASTENER |
| 26 | 210866 | | | Nut, Twin Speed |
| 27 | 210879 | | Not Available | SCREW, No.8 X 1/2 INCH |
| 28 | 210995 | | Not Available | BACK PANEL |
| 29 | 211065 | | | Spring, Index Wheel |
| 30 | 211113 | | Not Available | TRIM MOULDING |
| 31 | 211114 | | Not Available | RETAINER FOR TRIM |
| 32 | 211168 | W10139210 | | Screw, 8-18 X 5/16 |
| 33 | 211251 | | | Screw, Transformer |
| 34 | 211500 | | | Washer, Bracket To Top Cover |
| 35 | 214697 | | | Easy-Grip Knob |
| 36 | 211586 | | Not Available | SCREW, No.8 X 7/8 INCH |
| 37 | 211587 | | Not Available | SCREW, No.8 X 1/4 INCH |
| 38 | 211605 | | | Bezel, Timer Dial |
| 39 | 211726 | | | Hinge, Ball Lid |
| 40 | 211737 | 248562 | | Terminal |
| 41 | 211738 | | Not Available | SPRING FASTENER |
| 42 | 200739 | | Not Available | GEAR HOUSING |
| 43 | 211835 | | Not Available | CONTROL KNOB - TIMER |
| 44 | 211881 | | | Grommet, Cord Part Not Used- Gas Models Only |
| 45 | 211970 | | Not Available | SCREW-TOP COVER TO CABINET |
| 47 | 212012 | | Not Available | TIMER DIAL |
| 48 | 212014 | | Not Available | MEDALLION |
| 49 | 212062 | | Not Available | RECTANGULAR PLUG |
| 50 | 212073 | | | LID (WHITE) |
| 51 | 212138 | | Not Available | FASTENER, PANEL TO TOP COVE |
| 52 | 212220 | 213501 | | Screw, No.6-20 X 1-1/8 Inch |
| 53 | 212336 | | Not Available | SCREW, No.8 X 3/4 INCH |
| 54 | 212628 | | Not Available | SCREW & WASHER |
| 55 | 212716 | | | Bumper, Lid |
| 56 | 212800 | | Not Available | TINNERMAN |
| 57 | 212812 | | Not Available | TOP COVER, PORCELAIN |
| 58 | 212813 | | | Pin For Lid Switch |
| 59 | 212814 | 204968 | | Plunger And Bracket Assembly--W |
| 60 | 213077 | | Not Available | CAP FOR TIMER KNOB |
| 61 | 310219 | | | No.10z Fastener |
| 62 | Y310376 | | | Clip, Door Switch Harness |
| 63 | Y310632 | 1163839 | | Screw |
| 64 | 310934 | 22003428 | | Leg, Adjustable |
| 65 | 053759 | 25-7614 | | Screw |