



[Maytag Residential Maytag A107 Washer Parts](#) Parts Diagram 06 - ELECTRICAL COMPONENTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201805	12002351		Motor-Drve
4	202770	279347		Switch-Lid
5	203167		Not Available	TEMP SWITCH
7	203177	205613		Water Valve
8	203235		Not Available	WIRE HARNESS - FILL
10	203362		Not Available	PRESSURE SWITCH
11	204590			Cord, Power
12	205001			Timer
14	205006			Major Wire Harness
15	205058			Timer Dial
18	205166		Not Available	TIMER DIAL, SUN-GLOW
19	210186	3370225		Screw
20	211065			Spring, Index Wheel
21	211605			Bezel, Timer Dial

22	211737	248562		Terminal
23	211881			Grommet, Cord Part Not Used-Gas Models Only
24	212220	213501		Screw, No.6-20 X 1-1/8 Inch
25	213077		Not Available	CAP FOR TIMER KNOB
26	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
27	214337	96160		Screen
28	301548			Clamp, Ground Wire
29	311155			Ground Wire And Clamp
30	Y311916	22003781		Screw, Ground Strap
31	Y313262	W10116752		Retainer-
32	205132		Not Available	SWITCH, MOTOR EXTERNAL START No.201664-14,205463-4 & 201800-4
33	205133		Not Available	(PROD. IDNo. 2-1664-8 & 2-5463)
34	205139		Not Available	EXTERNAL START SWITCH

