

Maytag A107 10 - FRONT VIEW



[Maytag Residential Maytag A107 Washer Parts](#) Parts Diagram 10 - FRONT VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203167		Not Available	TEMP SWITCH
3	203172		Not Available	TOP COVER-WHITE
4	203319	22203319		Cabinet
5	203362		Not Available	PRESSURE SWITCH
6	204439			Screw And Fstner Assembly
7	204445			Screw And Fastener Assembly
8	204695			Button Kit For 2-3167
10	204703			Button Kit For 2-3362
11	204704			Button Kit For 2-3362-1
12	205001			Timer
14	205003		Not Available	CONTROL PANEL
15	205058			Timer Dial
17	205160		Not Available	TOP COVER-WHITE
19	205166		Not Available	TIMER DIAL, SUN-GLOW
20	205192		Not Available	CONTROL PANEL, SUN-GLOW
				CONTROL PANEL KIT, SUN-GLOW

21	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
22	210385			Lock Nut For Adjustable Leg
23	210684			Foot, Adjustable Leg
24	211410			Screw, HeX Head No.8 X 3/8 Inch
25	211726			Hinge, Ball Lid
26	212073			LID (WHITE)
27	212716			Bumper, Lid
28	212982	22001650		Fastener, Spring
29	212995		Not Available	PLUG FOR CONTROL PANEL
30	212998		Not Available	PANEL, FRONT (WHT)
31	213007			Xfor Cabinet See Cabinet, Back
32	213077		Not Available	CAP FOR TIMER KNOB
33	213117	67006908		Screw, Ice Rack
34	213122	27001200		Screw
35	213322		Not Available	MAYTAG DECAL
36	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
37	Y302699	22003428		Leg, Adjustable

