

Maytag A107 11 - FRONT VIEW (SERIES 03)



[Maytag Residential Maytag A107 Washer Parts](#) Parts Diagram 11 - FRONT VIEW (SERIES 03)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	203172		Not Available	TOP COVER-WHITE
2	203319	22203319		Cabinet
3	204439			Screw And Fstner Assembly
4	204445			Screw And Fastener Assembly
6	205001			Timer
9	205166		Not Available	TIMER DIAL, SUN-GLOW
10	205192		Not Available	CONTROL PANEL, SUN-GLOW
11	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
12	205261		Not Available	TEMPERATURE CONTROL SWITCH
14	205333		Not Available	BUTTON KIT FOR 2-5261
15	205337		Not Available	WATER LEVEL SWITCH
16	205340	204703		Button Kit For 2-3362
17	205341			Button Kit For 2-5337-1
18	210385			Lock Nut For Adjustable Leg

19	210684		Foot, Adjustable Leg
20	211410		Screw, HeX Head No.8 X 3/8 Inch
21	211726		Hinge, Ball Lid
22	212073		LID (WHITE)
23	212716		Bumper, Lid
24	212982	22001650	Fastener, Spring
25	212995	Not Available	PLUG FOR CONTROL PANEL
26	212998	Not Available	PANEL, FRONT (WHT)
27	213007		Xfor Cabinet See Cabinet, Back
28	213077	Not Available	CAP FOR TIMER KNOB
29	213117	67006908	Screw, Ice Rack
30	213123	22001496	Front Panel Fastener And Screw
31	213322	Not Available	MAYTAG DECAL
32	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
33	Y302699	22003428	Leg, Adjustable
34	214493	59920-2	Rivet
35	214697		Easy-Grip Knob

