



[Maytag Residential Maytag A108 Washer Parts Parts Diagram 05 - ELECTRICAL COMPONENTS](#)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201805	12002351		Motor-Drve
4	202770	279347		Switch-Lid
5	203177	205613		Water Valve
6	203235		Not Available	WIRE HARNESS - FILL
8	204590			Cord, Power
9	205001			Timer
11	205006			Major Wire Harness
13	205166		Not Available	TIMER DIAL, SUN-GLOW
14	205261		Not Available	TEMPERATURE CONTROL SWITCH
16	205337		Not Available	WATER LEVEL SWITCH
17	210186	3370225		Screw
18	211065			Spring, Index Wheel
19	211605			Bezel, Timer Dial
20	211737	248562		Terminal

21	211737	248562	Terminal
22	211881		Grommet, Cord Part Not Used- Gas Models Only
23	213077		Not Available
24	213501		CAP FOR TIMER KNOB
25	214196		Not Available
26	214337	96160	Screw, No.6-20 X 1-1/8 Inch
27	301548		TIMER KNOB-CLEAR ACRYLIC
28	303846	22003781	Screen
29	311155		Clamp, Ground Wire
30	313122		Screw, Ground Strap
31	Y313262	W10116752	Ground Wire And Clamp
			Screw - Baffle To Tumbler
			Retainer-

the laundry company[®]

the laundry company[®]

the laundry company[®]