



[Maytag Residential Maytag A108S Washer Parts](#) Parts Diagram 06 - ELECTRICAL COMPONENTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201805	12002351		Motor-Drve
4	202770	279347		Switch-Lid
5	203177	205613		Water Valve
6	203235		Not Available	WIRE HARNESS - FILL
7	203236		Not Available	WIRE HARNESS - SUDS SAVE
8	204590			Cord, Power
10	205002	22205002		Timer
11	205006			Major Wire Harness
12	205165		Not Available	TIMER DIAL, SUN-GLOW
15	205321			Temperature Control Switch
16	205337		Not Available	WATER LEVEL SWITCH
17	210186	3370225		Screw
18	211065			Spring, Index Wheel
19	211605			Bezel, Timer Dial

20	211737	248562	Terminal
21	211737	248562	Terminal
22	211881		Grommet, Cord Part Not Used- Gas Models Only
23	213077	Not Available	CAP FOR TIMER KNOB
24	213501		Screw, No.6-20 X 1-1/8 Inch
25	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
26	214337	96160	Screen
27	301548		Clamp, Ground Wire
28	303846	22003781	Screw, Ground Strap
29	311155		Ground Wire And Clamp
30	313122		Screw - Baffle To Tumbler
31	Y313262	W10116752	Retainer-

the laundry company[®]

Howes
the laundry company[®]

Howes
the laundry company[®]