



Maytag [Residential Maytag A108S Washer Parts](#) Parts Diagram 08 - FRONT  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203319	<a href="#">22203319</a>		Cabinet
2	<a href="#">204439</a>			Screw And Fstner Assembly
3	<a href="#">204445</a>			Screw And Fastener Assembly
4	<a href="#">204696</a>			Button Kit For 2-3168
6	205002	<a href="#">22205002</a>		Timer
7	205160		Not Available	TOP COVER-WHITE
8	205165		Not Available	TIMER DIAL, SUN-GLOW
10	205192		Not Available	CONTROL PANEL, SUN-GLOW
11	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
13	<a href="#">205321</a>			Temperature Control Switch
15	205337		Not Available	WATER LEVEL SWITCH
16	205340	<a href="#">204703</a>		Button Kit For 2-3362
17	<a href="#">205341</a>			Button Kit For 2-5337-1
18	<a href="#">210385</a>			Lock Nut For Adjustable Leg
19	<a href="#">210684</a>			Foot, Adjustable Leg

20	<a href="#">211410</a>		Screw, HeX Head No.8 X 3/8 Inch
21	<a href="#">211726</a>		Hinge, Ball Lid
22	212073		LID (WHITE)
23	<a href="#">212716</a>		Bumper, Lid
24	212982	<a href="#">22001650</a>	Fastener, Spring
25	212995	Not Available	PLUG FOR CONTROL PANEL
26	212998	Not Available	PANEL, FRONT (WHT)
27	<a href="#">213007</a>		Xfor Cabinet See Cabinet, Back
28	213077	Not Available	CAP FOR TIMER KNOB
29	213117	<a href="#">67006908</a>	Screw, Ice Rack
30	213123	<a href="#">22001496</a>	Front Panel Fastener And Screw
31	213322	Not Available	MAYTAG DECAL
32	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
33	Y302699	<a href="#">22003428</a>	Leg, Adjustable

