



Maytag [Residential Maytag A108S Washer Parts](#) Parts Diagram 13 - REAR VIEW
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203177	205613		Water Valve
2	203319	22203319		Cabinet
3	204590			Cord, Power
4	205160		Not Available	TOP COVER-WHITE
5	205192		Not Available	CONTROL PANEL, SUN-GLOW
6	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
7	210385			Lock Nut For Adjustable Leg
8	210684			Foot, Adjustable Leg
9	211294	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
10	211878		Not Available	PLATE, ACCESS
11	211881			Grommet, Cord Part Not Used-Gas Models Only
12	212276	W10116760		Screw
13	212277			Screw, No.8 X 1/2 Inch
14	212984			Valve Mounting Plate

15	212985	22002924	Plate, Access
16	213009	Not Available	CONTROL COVER-WHITE
17	213121	3400111	Screw, 12-14 X 5/8
18	214135	Not Available	CLIP, FASTENER
19	214337	96160	Screen
20	214519		LABEL, ELECTRICAL INSTR. PART NOT USED-GAS MODELS ONLY
21	Y302699	22003428	Leg, Adjustable
22	312620		Screw, Sems

