


Maytag A112 05 - CONTROL PANEL (A112)

MODEL A112 CONTROL PANEL

SERIES 02

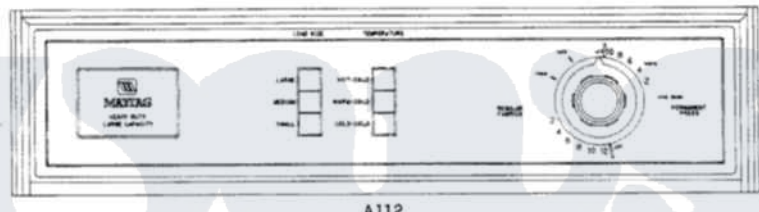


A112



2-15211
Button for the
2-6216 switch

2-15212
Button for the
2-6221 switch
with vertical shafts

2-15213
Button for the
2-6221 switch
with horizontal shafts

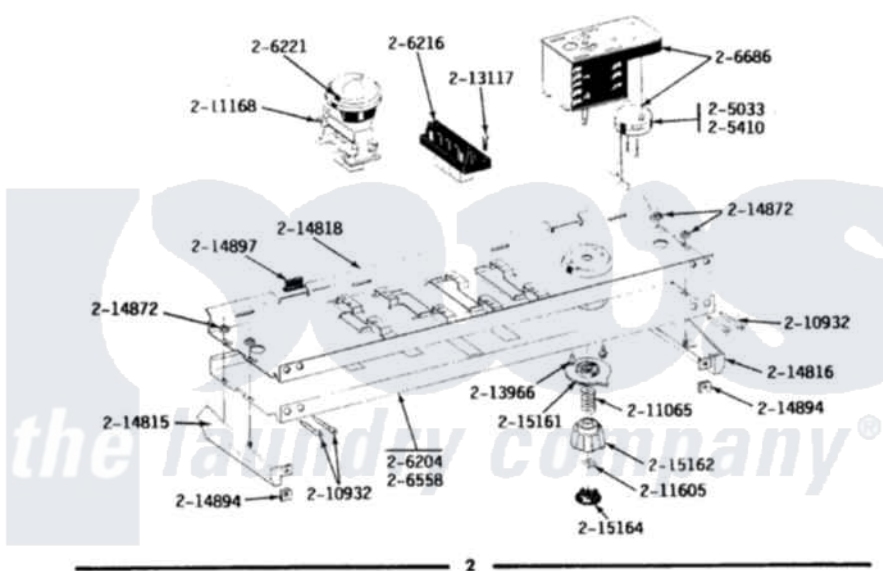

Maytag [Residential Maytag A112 Washer Parts](#) Parts Diagram 05 - CONTROL PANEL (A112)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	205033	22205033		Motor- Tim
2	205410		Not Available	TIMER MOTOR 120-60
3	206204		Not Available	CONTROL PANEL
4	206216			Water Temperature Switch
5	206221		Not Available	WATER LEVEL SWITCH--- NA
6	206558		Not Available	CONTROL PANEL
7	206686			Timer
8	210932			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
9	211065			Spring, Index Wheel
10	211168	W10139210		Screw, 8-18 X 5/16
11	211605			Bezel, Timer Dial
12	213117	67006908		Screw, Ice Rack
13	213966	3400014		Screw
14	214815			End Cap F/Control Panel-LH
15	214816			End Cap F/Control Panel-RH

16	214818		Back Up Plate
17	214872		Palnut, End Cap Note: Nut, Lamp Holder
18	214894		Fastener, End Cap
19	214897		Pad, Control Panel
20	215161	22001571	Bezel, Timer Dial
21	215162		Timer Knob
22	215164	Not Available	CAP FOR KNOB

