



Maytag Residential Maytag A181 Washer Parts Parts Diagram 08 - TRANSMISSIONS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	Y014827			Washer-Center Shaft
2	Y014839			Collar-Drive Shaft
3	Y015629			Bolt, Grinding Chamber
4	015639			Dowel Pin
NI	Y015902			Spring For Agitator
6	Y052740	62739		Nut, Lock
7	Y056080	6-0560800		Oil
8	200730	22002124		Shaft- Agi
9	200813		Not Available	GEAR CASE COVER ASSEMBLY
10	201463		Not Available	PITMAN WITH WRIST PIN
11	203162			Gear Housing W/Studs And Tube
13	203383	W10172458		Transmison
15	204967			Gear Kit-Power Fin Agitator
16	205811			Counterweight
17	210054			Pinion

18	210172		Lock Washer
19	210179		Retaining Ring
20	210183		Groove Pin
NI	210286		Seal
"	210315		Pinion
23	210632	22210632	Gasket
24	210670		Segment
25	210690		Seal, Rubber
26	211089		Lug, Stop Pulley
27	211090	22003555	Washer, Stop Lug
28	211375	681582	Screw
29	211483	6-2114830	Washer- SP
30	211484		Washer, Lug
31	211486		Screw, 3/8-16 X 1/2 Inch
32	211487		Groov-Pin
33	212988		Part Not Used
35	213068	204967	Gear Kit-Power Fin Agitator
36	214276	Not Available	WASHER FOR GEARS

