


# Maytag A1910 04 - CONTROL PANEL

SECTION: CONTROL PANEL  
MODEL: A1910

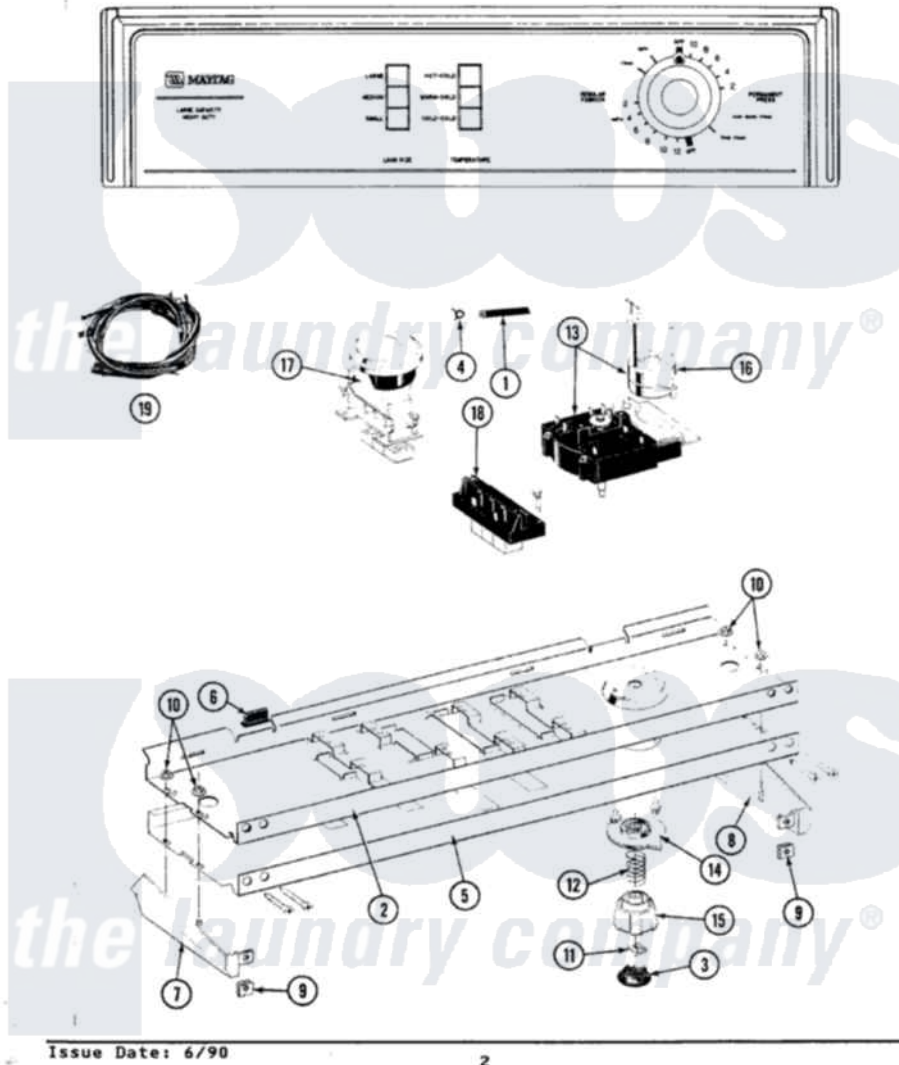

Issue Date: 6/90

2

Maytag [Residential Maytag A1910 Washer Parts](#) Parts Diagram 04 - CONTROL PANEL  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	212942	<a href="#">22001619</a>		Tube, Water Level Switch
2	<a href="#">214818</a>			Back Up Plate
"	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
3	215821		Not Available	CAP, KNOB
4	410296	<a href="#">596669</a>		Clamp, Manifold
5	207408		Not Available	CONTROL PANEL
"	<a href="#">210932</a>			Screw, No.8 X 9/16 Ctsk Note: Screw, Inlet Duct
6	<a href="#">214897</a>			Pad, Control Panel
7	207215		Not Available	END CAP LH
8	207216		Not Available	END CAP RH
9	<a href="#">214894</a>			Fastener, End Cap
10	<a href="#">214872</a>			Palnut, End Cap Note: Nut, Lamp Holder
11	<a href="#">211605</a>			Bezel, Timer Dial
12	<a href="#">211065</a>			Spring, Index Wheel

13	213966	<a href="#">3400014</a>	Screw
"	<a href="#">207379</a>		Timer
14	215827	Not Available	TIMER DIAL SKIRT
15	<a href="#">215828</a>		Knob, Timer
16	205033	<a href="#">22205033</a>	Motor- Tim
17	207363	Not Available	3 LEVEL PRESSURE SWITCH
"	211168	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
18	213117	<a href="#">67006908</a>	Screw, Ice Rack
"	207368	Not Available	TEMP CONTROL SWITCH - 3 BUTTON
19	<a href="#">207383</a>		Wire Harness

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>

**Howes**  
*the laundry company*<sup>®</sup>