



[Maytag Residential Maytag A200 Washer Parts Parts Diagram 04 - ELECTRICAL PARTS](#)  
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">200729</a>			Timer
2	<a href="#">200806</a>			Solenoid
3	<a href="#">200977</a>			Solenoid For Water Valve
4	200996		Not Available	TIMER MOTOR, A
5	201012		Not Available	ESCAPEMENT FOR TIMER
6	<a href="#">201781</a>			Temperature Switch
8	201805	<a href="#">12002351</a>		Motor-Drve
9	<a href="#">201809</a>			Lid Switch
10	201956		Not Available	MOTOR CORD
12	201985		Not Available	WIRE HARNESS
13	202497		Not Available	UNBALANCE LEVER
14	<a href="#">211065</a>			Spring, Index Wheel
15	<a href="#">211251</a>			Screw, Transformer
16	211553		Not Available	SELF CANCEL ROD
17	<a href="#">211605</a>			Bezel, Timer Dial
18	211835		Not Available	CONTROL KNOB - TIMER

