



Maytag [Residential Maytag A203 Washer Parts](#) Parts Diagram 05 - ELECTRICAL PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200046		Not Available	CONNECTOR, FEMALE
2	200806			Solenoid
3	200977			Solenoid For Water Valve
4	200996		Not Available	TIMER MOTOR, A
5	201124		Not Available	UNBALANCE LEVER
6	201750			Timer RPR
7	201754		Not Available	PRESSURE SWITCH
8	201755		Not Available	FABRIC SWITCH
10	201781			Temperature Switch
11	201782			Temperature Switch
12	201807	12002353		Motor-Drve
13	Y201808			Converter
14	201956		Not Available	MOTOR CORD
15	202208		Not Available	ESCAPEMENT FOR TIMER
16	202770	279347		Switch-Lid
17	210175		Not Available	WIRE CONNECTOR

18	211065		Spring, Index Wheel
19	211168	W10139210	Screw, 8-18 X 5/16
20	211225		Not Available PAD FOR UNBALANCE BUMPER
21	211251		Screw, Transformer
22	211586		Not Available SCREW, No.8 X 7/8 INCH
23	211587		Not Available SCREW, No.8 X 1/4 INCH
24	211605		Bezel, Timer Dial
25	211737	248562	Terminal
26	211835		Not Available CONTROL KNOB - TIMER
27	212008		Not Available TIMER DIAL
29	212220	213501	Screw, No.6-20 X 1-1/8 Inch
30	212813		Pin For Lid Switch
31	212814	204968	Plunger And Bracket Assembly--W
32	213077		Not Available CAP FOR TIMER KNOB
33	Y310376		Clip, Door Switch Harness
34	053759	25-7614	Screw

