

Maytag A207 07 - FRONT VIEW (ORIGINAL & SERIES 01)



[Maytag Residential Maytag A207 Washer Parts](#) Parts Diagram 07 - FRONT VIEW (ORIGINAL & SERIES 01)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	203167		Not Available	TEMP SWITCH
3	203172		Not Available	TOP COVER-WHITE
4	203185		Not Available	FABRIC SWITCH
5	203319	22203319		Cabinet
6	203362		Not Available	PRESSURE SWITCH
7	204439			Screw And Fstner Assembly
8	204445			Screw And Fastener Assembly
9	204454			Timer
11	204695			Button Kit For 2-3167
13	204702		Not Available	BUTTON KIT FOR 2-3185
14	204703			Button Kit For 2-3362
15	204704			Button Kit For 2-3362-1
16	205003		Not Available	CONTROL PANEL
17	205060		Not Available	TIMER DIAL
20	205168		Not Available	TIMER DIAL, SUN-GLOW
21	205192		Not Available	CONTROL PANEL, SUN-GLOW

22	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
23	210385			Lock Nut For Adjustable Leg
24	210684			Foot, Adjustable Leg
25	211726			Hinge, Ball Lid
26	212073			LID (WHITE)
27	212716			Bumper, Lid
28	212982	22001650		Fastener, Spring
29	212998		Not Available	PANEL, FRONT (WHT)
30	213007			Xfor Cabinet See Cabinet, Back
31	213077		Not Available	CAP FOR TIMER KNOB
32	213117	67006908		Screw, Ice Rack
33	213122	27001200		Screw
34	213322		Not Available	MAYTAG DECAL
35	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
36	Y302699	22003428		Leg, Adjustable

