



[Maytag Residential Maytag A207S Washer Parts](#) Parts Diagram 06 - ELECTRICAL COMPONENTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201807	12002353		Motor-Drve
4	202770	279347		Switch-Lid
6	203168		Not Available	SWITCH, TEMPERATURE & SUDS
7	203177	205613		Water Valve
8	203235		Not Available	WIRE HARNESS - FILL
9	203236		Not Available	WIRE HARNESS - SUDS SAVE
10	203362		Not Available	PRESSURE SWITCH
12	204463		Not Available	TIMER
13	204475			Major Wire Harness
14	204590			Cord, Power
16	205061	214390		Timer Dial
17	205167		Not Available	TIMER DIAL, SUN-GLOW
19	210186	3370225		Screw

20	211065		Spring, Index Wheel
21	211605		Bezel, Timer Dial
22	211737	248562	Terminal
23	211881		Grommet, Cord Part Not Used- Gas Models Only
24	213077		Not Available
25	213501		CAP FOR TIMER KNOB
29	213667	22003298	Screw, No.6-20 X 1-1/8 Inch
30	214196		Retainer, Wire
31	214337	96160	TIMER KNOB-CLEAR ACRYLIC
32	301548		Screen
33	303846	22003781	Clamp, Ground Wire
34	311155		Screw, Ground Strap
35	Y313262	W10116752	Ground Wire And Clamp
			Retainer-

