

# Maytag A207S 08 - FRONT VIEW (ORIGINAL & SERIES 01)



[Maytag Residential Maytag A207S Washer Parts](#) Parts Diagram 08 - FRONT VIEW (ORIGINAL & SERIES 01)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
2	203168		Not Available	SWITCH, TEMPERATURE & SUDS
3	203172		Not Available	TOP COVER-WHITE
4	203185		Not Available	FABRIC SWITCH
5	203319	<a href="#">22203319</a>		Cabinet
6	203362		Not Available	PRESSURE SWITCH
7	<a href="#">204439</a>			Screw And Fstner Assembly
8	<a href="#">204445</a>			Screw And Fastener Assembly
10	204463		Not Available	TIMER
12	<a href="#">204696</a>			Button Kit For 2-3168
13	204702		Not Available	BUTTON KIT FOR 2-3185
14	<a href="#">204703</a>			Button Kit For 2-3362
15	<a href="#">204704</a>			Button Kit For 2-3362-1
16	205003		Not Available	CONTROL PANEL
18	205061	<a href="#">214390</a>		Timer Dial
19	205167		Not Available	TIMER DIAL, SUN-GLOW

21	205192		Not Available	CONTROL PANEL, SUN-GLOW
22	205197		Not Available	CONTROL PANEL KIT, SUN-GLOW
23	<a href="#">210385</a>			Lock Nut For Adjustable Leg
24	<a href="#">210684</a>			Foot, Adjustable Leg
25	<a href="#">211726</a>			Hinge, Ball Lid
26	212073			LID (WHITE)
27	<a href="#">212716</a>			Bumper, Lid
28	212982	<a href="#">22001650</a>		Fastener, Spring
29	212998		Not Available	PANEL, FRONT (WHT)
30	<a href="#">213007</a>			Xfor Cabinet See Cabinet, Back
31	213077		Not Available	CAP FOR TIMER KNOB
32	213117	<a href="#">67006908</a>		Screw, Ice Rack
33	213122	<a href="#">27001200</a>		Screw
34	213322		Not Available	MAYTAG DECAL
35	214196		Not Available	TIMER KNOB-CLEAR ACRYLIC
36	Y302699	<a href="#">22003428</a>		Leg, Adjustable

