



Maytag [Residential Maytag A208 Washer Parts](#) Parts Diagram 06 - ELECTRICAL COMPONENTSQ
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	200806			Solenoid
2	201168			Diverter Valve
3	201807	12002353		Motor-Drve
4	202770	279347		Switch-Lid
5	203177	205613		Water Valve
6	203235		Not Available	WIRE HARNESS - FILL
8	204454			Timer
10	204475			Major Wire Harness
11	204590			Cord, Power
12	205131			Switch, Motor External Start
14	205140		Not Available	EXTERNAL START SWITCH
16	205168		Not Available	TIMER DIAL, SUN-GLOW
17	205261		Not Available	TEMPERATURE CONTROL SWITCH
19	205337		Not Available	WATER LEVEL SWITCH
20	210186	3370225		Screw
21	211065			Spring, Index Wheel

22	211605		Bezel, Timer Dial
23	211737	248562	Terminal
24	211881		Grommet, Cord Part Not Used- Gas Models Only
25	213077	Not Available	CAP FOR TIMER KNOB
26	213501		Screw, No.6-20 X 1-1/8 Inch
27	214196	Not Available	TIMER KNOB-CLEAR ACRYLIC
28	301548		Clamp, Ground Wire
29	303846	22003781	Screw, Ground Strap
31	313122		Screw - Baffle To Tumbler
32	Y313262	W10116752	Retainer-

the laundry company[®]

the laundry company[®]

the laundry company[®]